


Resource
Data Management

RS485 Network Interface

Installation/User Guide
Revision 1.0

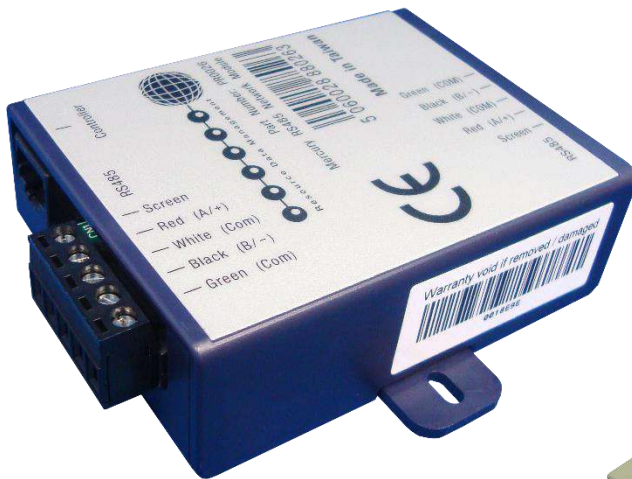

PR0026
PR0026 DIN

Contents

Network Modules PR0026 – PR0026-DIN	3
Physical Mounting	3
PR0026	3
PR0026-DIN	3
Connections	3
Controller	3
RS485 Connection	3
Network Cable part number	4
Logging On	4
Revision History	4




Please ensure all power is switched off before installing or maintaining this product.

Network Modules PR0026 – PR0026-DIN


Physical Mounting

Mount the network Module using suitable screws or bolts through the two lugs provided. Alternatively use double-sided self adhesive tape on the bottom surface. Leave adequate clearance for the network and controller cables.

PR0026

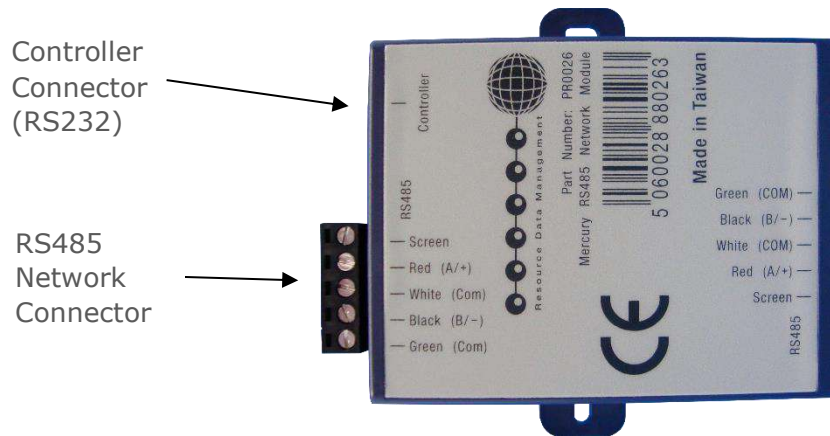

PR0026-DIN

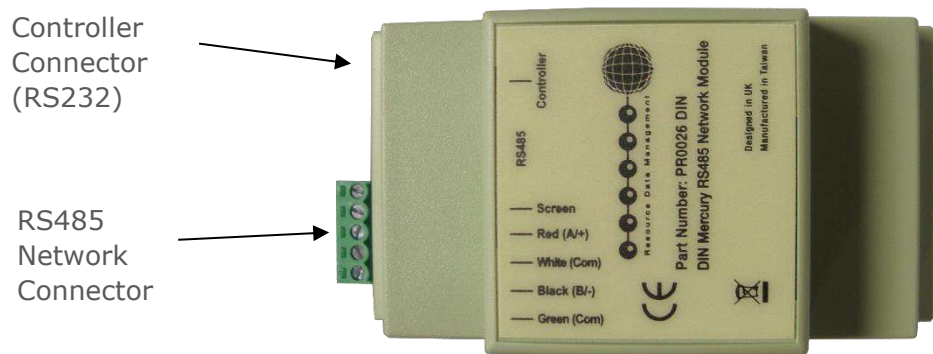


Connections

Controller

Connect the RS485 module to an RDM controllers RS232 communication port by using an 8 way one - one RJ45 cable (CAT5 Patch cable).

RS485 Connection

Using suitable network cable* connect the RS485 module to a network manager (such as RDM Data Manager) with the following connections:

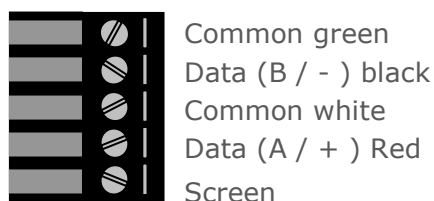

Please ensure all power is switched off before installing or maintaining this product.

Network Cable part number

*Belden 8723 or equivalent

Logging On

For logging on to the network manager, consult the appropriate user guide.

Revision History

Date	Version	Update No	Changes
04/09/2020	V1.0	01	First release



Please ensure all power is switched off before installing or maintaining this product.

Group Offices

RDM Group Head Office

80 Johnstone Avenue
Hillington Industrial Estate
Glasgow
G52 4NZ
United Kingdom

+44 (0)141 810 2828
support@resourcedm.com

RDM Inc

100 North Sixth Street
Suite 630B
Minneapolis, MN
55403
United States

+1 612 354 3923
usasupport@resourcedm.com

RDM Asia

Sky Park at One City
Jalan USJ 25/1
47650 Subang Jaya
Selangor
Malaysia

+60 3 5115 0061
info@rdmasia.com.my



Visit www.resourcedm.com/support for more information on RDM solutions, additional product documentation and software downloads.

While every effort is made to ensure the information given within this document is accurate, Resource Data Management Ltd shall not be liable for errors or omissions, for incidental or consequential damages, directly or indirectly, in connection with the furnishing, performance or misuse of this product or document. All specifications are subject to change without notice.

See www.resourcedm.com for terms and conditions of sales.

Copyright © Resource Data Management