

Resource
Data Management

Mercury Coldroom Panel

Commissioning/User Guide
Revision 7.7d



PR0150-XX

Contents

The Mercury Range	4
Networks.....	4
Configuration	4
Front Panel Features	5
Internal Connections.....	6
Probe and Alarm inputs	7
Internal Cable Diagram for LLV type	8
Internal Cable Diagram for EEV type	8
RS485 Network Connection.....	8
Input/Output Allocation Tables	9
Inputs and Outputs.....	9
Digital Inputs	9
Setting up the Panel	10
Setup through the keypad	10
Setup Function Menu	10
Pin Menu Access	10
Recommended set-up method.....	11
rtc. Real time clock (This will automatically synchronise on network systems)	11
type. Set/view controller type	11
Unit. Set/view temperature unit and Probe type	11
Probe Types.....	11
Display	12
PArA. Set/view parameters (This can be achieved at the network front end)	12
Parameter Table for Compressor/LLV type:.....	12
Parameter table for EEV Type	14
Parameters Description	16
Load Shedding	21
EEV Control Using Pressure.....	21
Mercury Switch (PR0018-PHI)	21
Remote pressure Direct from a Plant Pack Controller.....	21
Local Analogue Input – mA or V	21
Maximum Operating Pressure.....	21
Relay State and functional operation	22
Network Configuration	22



Please ensure all power is switched off before installing or maintaining this product.

485 Legacy module.....	22
IP Futura module.....	23
Viewing	24
Input/Output table for Coldroom Panel with Compressor/LLV option.....	25
Input/Output table for Coldroom Panel with EEV option	26
Switched Resistor Values for Case Clean and Plant Fault 1 Inputs	27
Alarm Messages	27
Network Alarms	27
Modifying controller states	28
Fans Only "FAnS"	28
Case Off "CASE"	28
Lights Only "Ligt".....	28
Probe Offset.....	28
Remote Commands:	29
Specification	30
Installation	32
Fixing.....	32
Display Remote Mounting	33
Display dimensions and fixing	33
Ordering Information	34
Disclaimer:	34
Appendix 1	35
Instructions – MCB Variants	35
Instructions – Fuse Variants.....	36
Revision History	38



Please ensure all power is switched off before installing or maintaining this product.

The Mercury Range

From Resource Data Management

The Mercury Coldroom panel has been specifically developed to suit a variety of coldroom needs. The purpose developed enclosure has a detachable display/keypad for applications where the main enclosure is required to be "out of reach". The panel is available with or without a main isolator switch. Each internal circuit has either fuse or circuit breaker protection.

Based on Mercury technology, the controller has parameters that give this product complete flexibility for controlling either produce (HT) or freezer coldrooms (LT).

Coldroom lights can be configured for maximum energy saving by using a timer (local or remote) to enable the lights and using the "lights on when door is open" feature. A front panel over-ride switch is available when the door needs to be closed and the lights are required to be on.

NB – Please be aware new software builds are not compatible with some older versions of hardware. These can be identified by controllers using V6.4 (E) / V6.3 (M) and below. With these older boards software V6.4 is the latest update.

Networks

The panel is capable of connecting to either a TCP/IP local area network (recommended) or a RS485 network or controlling in standalone mode with no network output. The built-in communication options are determined by the part number of the coldroom panel.

See [Parts Numbers](#) section for more information.

For non network versions it is possible to connect the coldroom panel to the following network interfaces:

Description	Part Number
IP Futura (Single Mercury to IP Interface)	PR0016
RS485 Interface (Single Mercury to RS485 Interface)	PR0026
Mercury IP Switch (IP support for 10 controllers)	PR0018
Mercury IP Switch with Pressure/Humidity Inputs	PR0018-PHI

Configuration

The Coldroom Panel (both the EEV and Compressor/LLV versions) has 2 types:

Display value	Type
1	LT Coldroom
2	HT Coldroom



Please ensure all power is switched off before installing or maintaining this product.

Front Panel Features

LED's: -

Valve 

Fans 

Lights 

Defrost 

On-Line 

- Off: No network attached
- Flashing: Attempting to Log on to network
- Steady: On-line


Service 

Alarm 

HACCP 




Keys

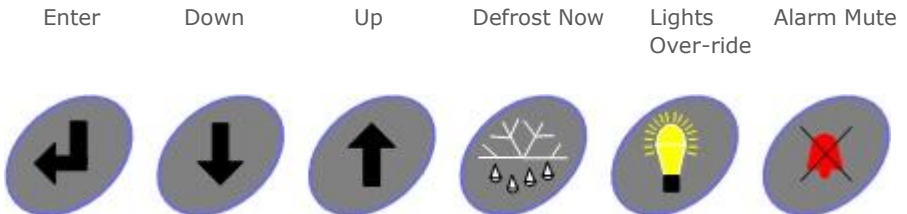

Note: Press and hold the defrost button to force a manual defrost

Main Display

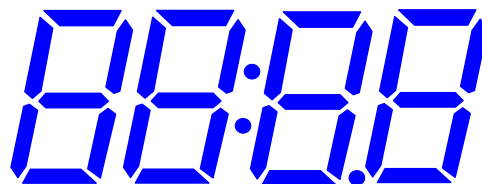


4 character blue LED display, used to display temperature and status messages.



Please ensure all power is switched off before installing or maintaining this product.

Internal Connections

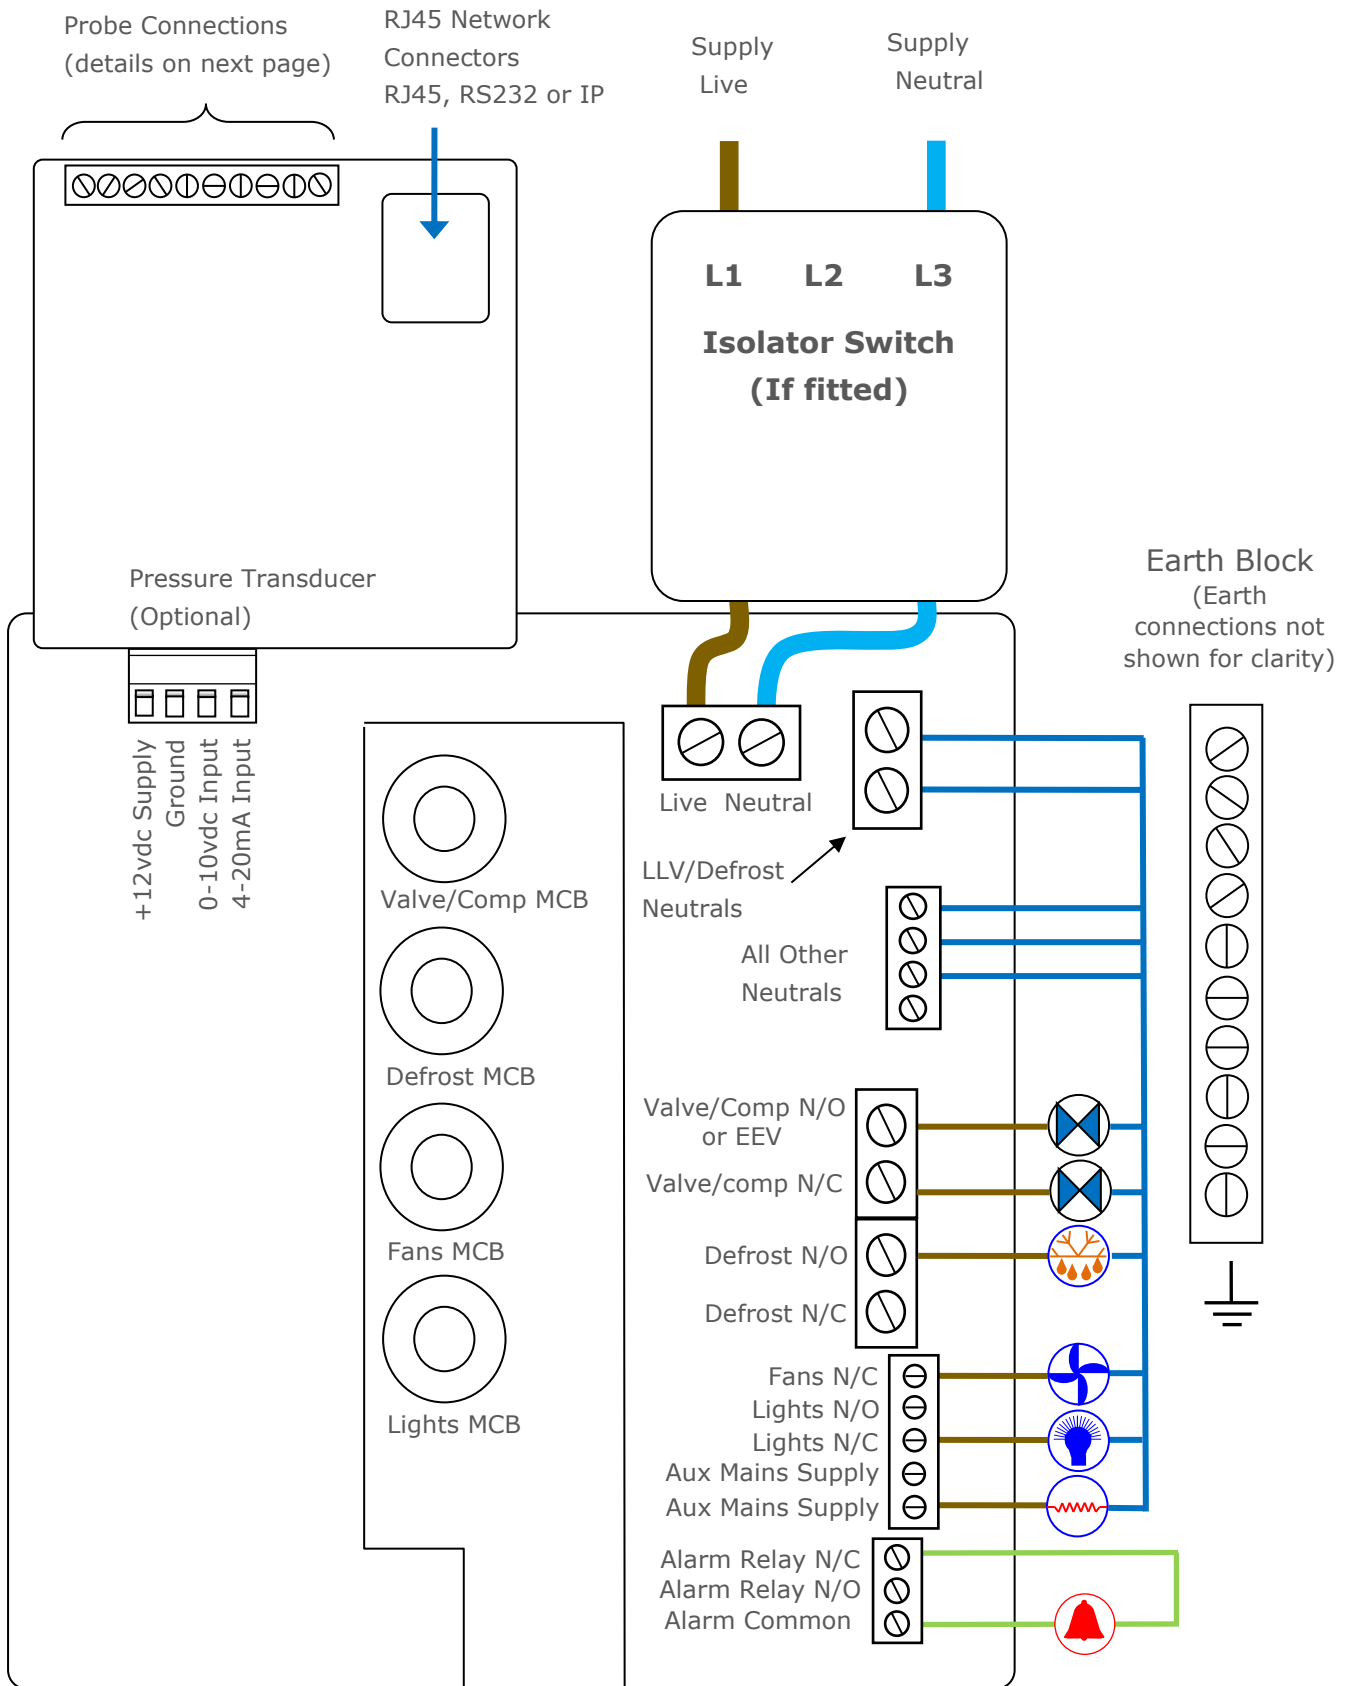

Please ensure all power is switched off before installing or maintaining this product.

Probe and Alarm inputs

Note:

When wiring in the probes to the connector, ensure that the 3 wires fitted to the probe connector (not shown on the diagram below) are not moved and remain firmly connected. These wires are used for the external digital inputs; door-open and entrapment. The resistors for the digital inputs are already present on the PCB for PT1000, 2K, 2K5, and 3K probe types and therefore external resistors are not required to signal door-open and entrapment alarms, the user only needs to configure the jumper switches (below). For all other probe types the 3 wires which connect the probe connector to the bottom circuit should be removed and a fixed value fixed resistor switched across the probe input used to activate door-open and entrapment alarms, the resistor values that should be used are as follows:


For 5K and 6K use 1K Ohm switched resistors.

For NTC10K probes use 2k7 Ohm switched resistors. You MUST remove Links for NTC10k(2) Probes.

For NTC10K(2) probes use 2K2 Ohm switched resistors. You MUST remove Links for NTC10k(2) probes.


Note: NTC10k and NTC10k(2) probes door switch goes to Probe 5 (defrost probe)

For suitable resistor values when using the additional switched resistor functions 'Case Clean' and 'Plant Fault 1' see "[Switched Resistor Values](#)"

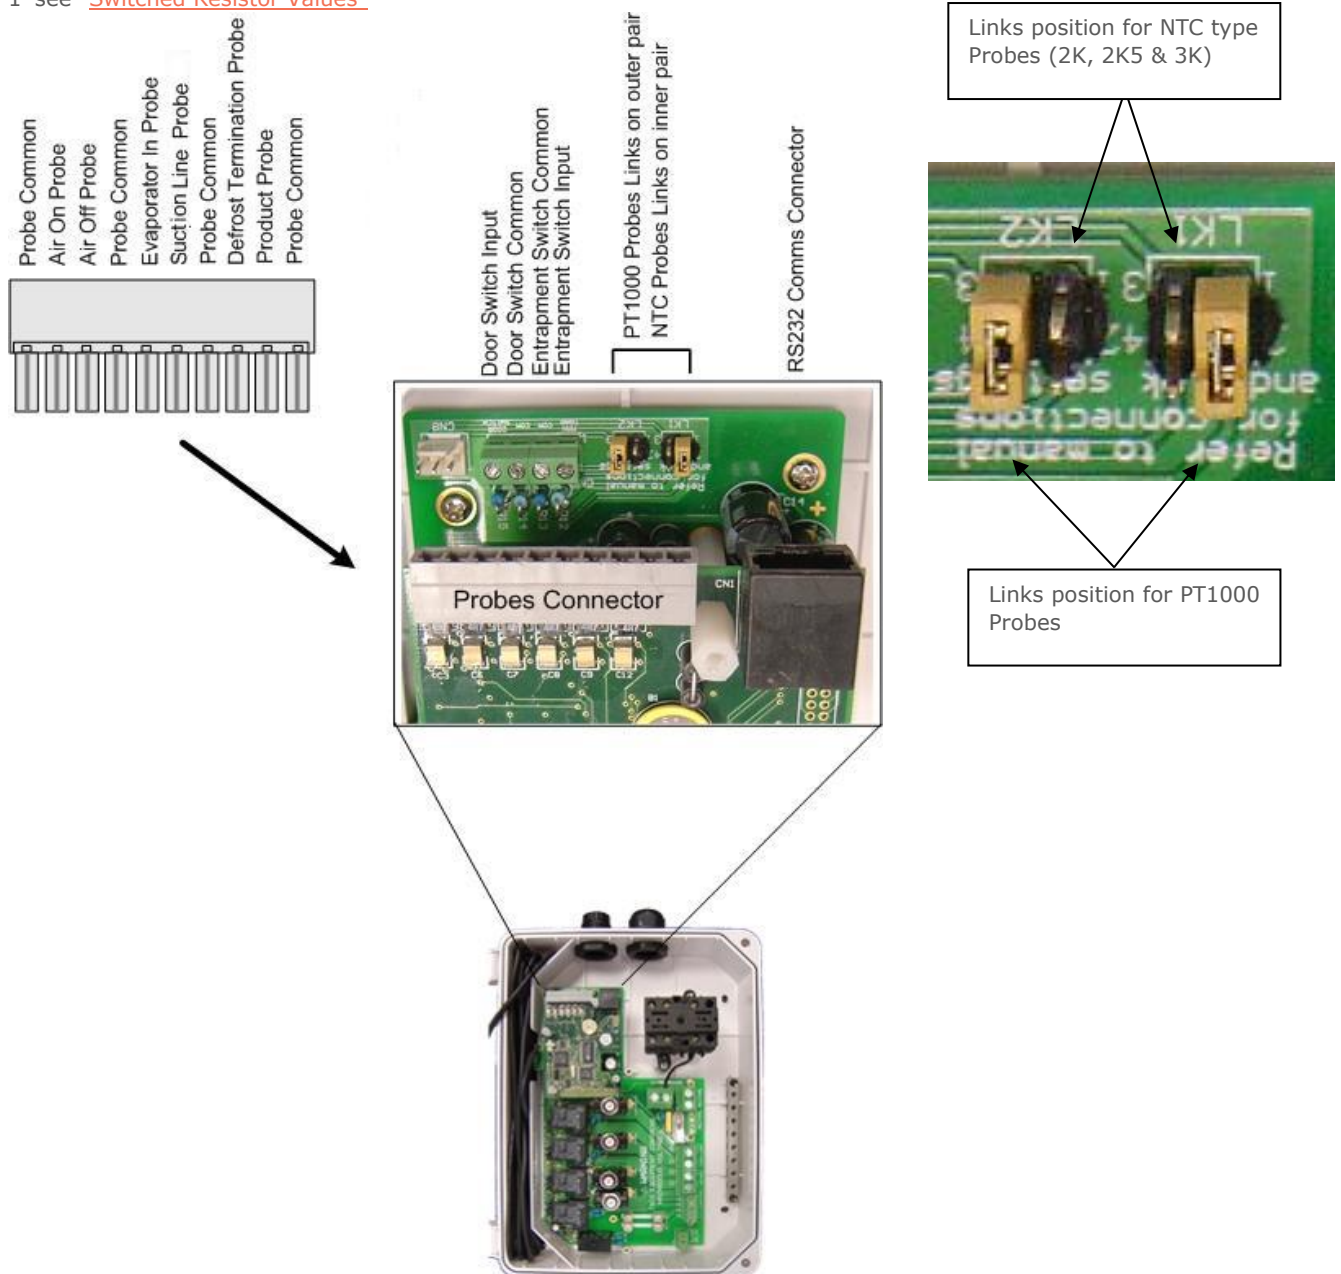


Please ensure all power is switched off before installing or maintaining this product.

Internal Cable Diagram for LLV type

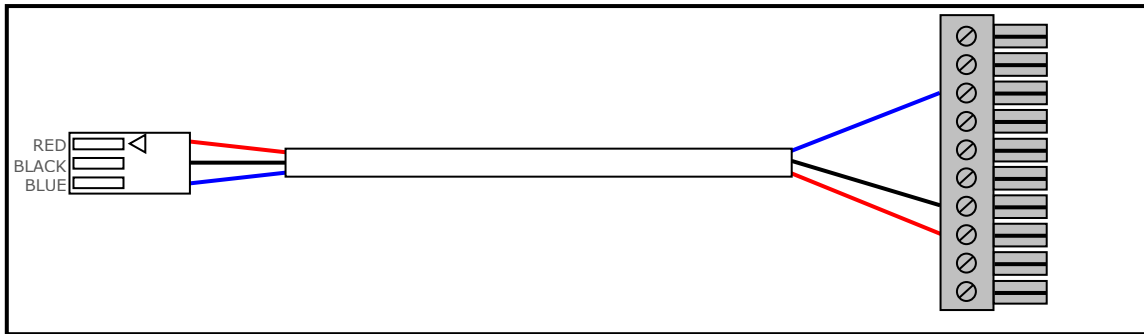


Internal Cable Diagram for EEV type

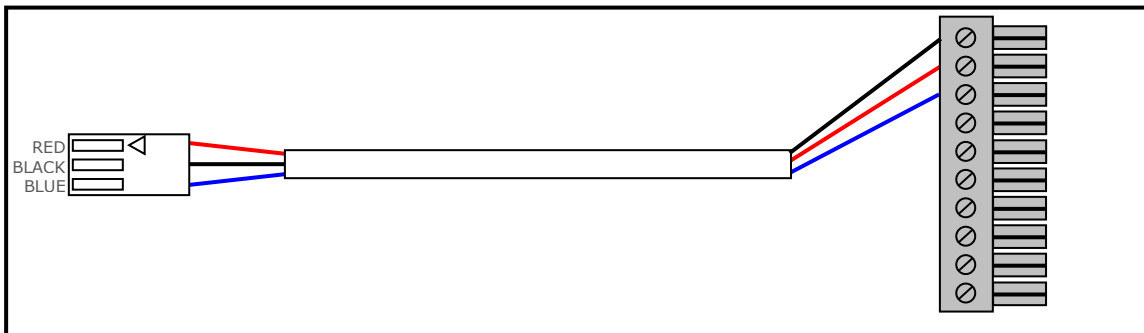

The above cable is used internally to bring the Door Switch and Man-trap inputs to the main processing board. This cable must not be removed or changed in any way.

RS485 Network Connection.

If the panel has been specified with RS485 communications then an RS485 communications card will be fitted in place of an IP card, connections are as shown, colours are for Belden 8723 cable.

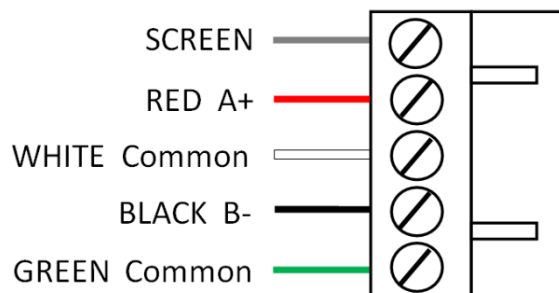

Please ensure all power is switched off before installing or maintaining this product.

Input/Output Allocation Tables

The following tables indicate; on a controller type basis, the functions of the inputs and outputs. Also shown are the digital inputs that are derived by switching in a fixed value resistor across the input.

Inputs and Outputs

Coldroom Panel	Models: All	Alarm Action	Comments
Earth	Bus-bar	N/A	This unit must be Earthed
L1	Incoming Live Feed	N/A	Connection on the isolator
L2	Not Used	N/A	
L3	Incoming Neutral Feed	N/A	Connection on the isolator
L	Incoming Live Feed	N/A	On the PCB (Non-isolator version)
N	Incoming Neutral Feed	N/A	On the PCB (Non-isolator version)
Input 1	Air on Temperature	Yes	Grey probe Connector
Input 2	Air off Temperature or Defrost Termination	Yes	Grey probe Connector
Input 3	Evaporator Temperature	No	Grey probe Connector
Input 4	Suction Line Temperature	No	Grey probe Connector
Input 5	Defrost Termination (if used)	No	Grey probe Connector
Input 6	Logging Probe (If fitted)	Conditional	Grey probe Connector
Door Switch	Door Switch	Yes	Uses Ground Return, open circuit indicates door closed, closed circuit indicates door open.
Entrapment Switch	Entrapment Switch	Yes	Uses Ground Return, open circuit indicates no entrapment situation, closed circuit indicates entrapment situation.
Compressor/LLV	N/O and N/C (N/O only on EEV)	N/A	See Specification for further details
Defrost	N/O and N/C	N/A	See Specification for further details
Fans	N/C	N/A	See Specification for further details
Lights	N/O and N/C	N/A	See Specification for further details
Out 1	Always Live (heater mats)	N/A	See Specification for further details
Out 2	Always Live (PRV)	N/A	See Specification for further details
Alarm	N/O, N/C & Common (Volt-free)	N/A	See Specification for further details

Note:

For PT1000 probes, jumpers; LK1 & LK2, are in the outer positions for the additional switched resistor functions to operate.

For NTC probe types 2K, 2K5 & 3K, jumpers; LK1 & LK2, are in the inner positions for the additional switched resistor functions to operate.

For NTC probe types 10k & 10k(2), jumpers; LK1 & LK2, are Removed for the additional switched resistor functions to operate. Door switch input goes to INPUT 5.

Digital Inputs

Models: M	Alarm Action	Plant input
Fixed input on PCB	Yes	Man trap
Fixed input on PCB	Yes	Door Switch
Evaporator Probe	Conditional	Plant fault 1/External defrost input*
Suction Line Probe	No	Case Clean*
Models: E	Alarm Action	Plant input
Fixed input on PCB	Yes	Man trap
Fixed input on PCB	Yes	Door Switch
Air on Temperature Probe	Conditional	Plant Fault 1/External defrost input*
Air off Temperature Probe	No	Case Clean*



Please ensure all power is switched off before installing or maintaining this product.

*See: [Switched Resistor Values for Case Clean and Plant Fault 1 Inputs](#)

Setting up the Panel

Access to the Panel can be achieved by the following methods:

- Through the front panel keypad
- Direct access by PC or palm top into the RS232 comms port. This requires a software package (Communicator) available on the RDM website
- Direct access by PC using Ethernet (IP-L) and an IP browser (e.g. Internet Explorer)
- Through legacy front end panels on 485 networks
- Through the RDM Data Manage

Setup through the keypad



To enter setup mode, hold the Enter and Down buttons together for approximately 3 seconds until the message "Ent" appears on the display. Now press the Enter button again to enter the function menu. IO will be displayed. Scroll up or down to go through the list.

Setup Function Menu

(Common to all types)

Display	Option	Explained in Paragraph
IO	View Inputs / Outputs and States	Input / output table
PARA	Set/View Parameters	Set view parameters
Unit	Probe type and Celsius/Fahrenheit option	Set View Unit
PrES	Pressure Units, 0=Bar, 1=psi	
diSP	Display whole units or decimal	Display
tyPE	Set/View Controller Type	Set/view controller type
rtc	Set/view Clock (rtc = Real Time Clock)	Real Time Clock
nEt	Set/view network configuration	Network Configuration
SoFt	View software version	
FANS	Toggle Fans Only mode	Fans
CASE	Toggle Case Off mode	Case Off
Ligt	Toggle Lights Only mode	Lights
OFSt	Probe Offset	Probe Offset
ESC	Exit Setup mode	

Pin Menu Access

The configuration menus within the controller can be pin-protected (excluding "IO" and "Soft"). I.e. trying to access the settings on the controller's display will prompt the user for a pin number (p-35 on the parameters list). When enabled, if trying to access a menu within the above table, the display will show 'Pin'. Pressing the



Please ensure all power is switched off before installing or maintaining this product.

Enter button at this point will allow you to enter a 3 digit pin, allowing access to the menus. The pin number can be set up through p-35 on the controller parameter's page, either through the display or Data Manager.

NB – if the pin has been lost then RDM technical can be contacted to retrieve it

Recommended set-up method

If you are not connecting to a network and want to set up the controller through the buttons we recommend you use the following order from the function menu.

rtc. Real time clock (This will automatically synchronise on network systems)

- a. Use the up or down buttons to scroll through the display until the display reads "rtc"
- b. Press enter. The display will show "t-1". press enter again
- c. Scroll hours up or down (0 – 23) press enter
- d. Use up button to select "t-2", press enter
- e. Scroll minutes up or down (0 – 59) press enter
- f. Repeat for t-3 (seconds 0 – 59)
- g. Repeat for t -4 (days up to 31)
- h. Repeat for t -5 (months up to 12)
- i. Repeat for t -6 (year up to 99)
- j. Use up button to display "ESC", press enter to display "rtc"

Time clock is now set

type. Set/view controller type

- a. From the function menu scroll to select type, press enter
- b. Use the up/down buttons to scroll through case/coldroom configuration types. (see [configuration table on](#) page 3)
- c. Press enter.
- d. Scroll to select "ESC"
- e. Press enter

Controller type configuration is now set

Unit. Set/view temperature unit and Probe type

From the function menu scroll to select Unit
Press enter and the value will be displayed:

Probe Types

0 for PT1000 Celsius	10 for NTC2K25 Celsius
1 for PT1000 Fahrenheit	11 for NTC2K25 Fahrenheit
2 for NTC2K Celsius	12 for 5K Celsius
3 for NTC2K Fahrenheit	13 for 5K Fahrenheit
4 for 470R Celsius	14 for 6K Celsius
5 for 470R Fahrenheit	15 for 6K Fahrenheit
6 for 700R Celsius	16 for NTC10K Celsius
7 for 700R Fahrenheit	17 for NTC10K Fahrenheit
8 for 3K Celsius	18 for NTC10K(2) Celsius (USA NTC10K)
9 for 3K Fahrenheit	19 for NTC10K(2) Fahrenheit (USA NTC10K)

Range of probes -49.0 degrees to +60.0 Degrees (PT1000 - 60.0 to 128.0 Degrees C)

Note: If probe is used with switched resistor range at low end is only -42.0 degrees

Note: Temperature range for NTC2K25 is restricted to -42 °C to +60 °C for probe inputs with a secondary function (switched resistors) and -49 °C to +60 °C for inputs that have no secondary function.



Please ensure all power is switched off before installing or maintaining this product.

Use the up or down keys to select the units and press enter.

This function is now complete

Display

From the function menu scroll to and select diSP.

Press enter and one of the following values will be shown:

0. Controller display will show the whole number and tenths value of a temperature reading. (Default)

1. Controller display will show temperatures as a whole number.

PArA. Set/view parameters (This can be achieved at the network front end)

- a. From the function menu scroll to select PArA
- b. Pressing Enter while PArA is displayed will enter the parameter menu. The first parameter option will be displayed as P-01. Pressing the Up or Down button will present the other parameter options P-02, P-03 etc. See the parameter list below to find what parameter number corresponds to which actual parameter. Pressing the Enter button will show the current value of the selected parameter. Press Up or Down to modify the value and press Enter again to save the value. The parameter list number will be displayed again. Two other options are present in the parameter menu – dFLt and ESC. Selecting ESC will exit setup mode. Selecting dFLt will reset all parameters back to the default values for the current type of controller.

Parameter Table for Compressor/LLV type:

Number	Parameter	Range °C (°F)	Step	Units	Def. LT °C (°F)	Def. HT °C (°F)
P-01	Cut-in Temp	-49.0 to 30.0 (-52.2 to 86)	0.1	Deg	-20 (-4)	0.0 (32)
P-02	Diff	0 to 10 (0 to 10)	0.1	Deg	2 (3.6)	1.5 (2.7)
P-03	Control Weight	0 to 100	1	%	50	50
P-04	Display Weight	0 to 100	1	%	50	50
P-85	Key-switch Mode	Not Used	-	-	-	-
P-87	Control Probe type	0 = Use Air on Probe 1 = Use Log Probe	1		0	0
P-08	Probe 2 Type	0 = Air Off Probe 1 = Defrost Probe	1		0	0
P-90	Resistor Case Off	0 = Disabled. 1 = Enabled			0	0
P-92	Fans temperature mode	0 = Off 1 = Temperature 2 = Over-temperature 3 = Temp/OT	1		0	0
P-93	Fans Off Temperature	-42 to 30 (-52.2 to 86)	0.1	Deg	-10 (14)	8 (46.4)
P-83	Fan Control	0 = Off. 1 = Run. 2 = Pulse	1			
P-78	Fan Pulse On	00:00 to 99:00	01:00	mm:ss		
P-79	Fan Pulse Off	00:00 to 99:00	01:00	mm:ss		
P-98	Control Fail On/Off	00:00 to 10:00	01:00	mm:ss	00:00	00:00
P-29	Probe 3 Operation (Digital Input)	0 = Plant Fault 1 = External Defrost Input	1		0	0
P-18	Service Time	0 to 128	1	K Hrs	60	60
P-95	Trap Stops LLV/Fans	0 = Off. 1 = Yes	1		0	0
P-99	Load Shedding	0 = No. 1 = Yes	10		0	0
P-35	Display Pin	0 – 999 (0 = off)	1		0	0
P-20	Alarm Delay	00:00 to 99:00	01:00	mm:ss	20:00	20:00
P-21	UT Alarm	-49 to 128 (-56.2 to 262) *	0.1	Deg	-30 (-22)	-2 (28.4)
P-22	OT Alarm	-49 to 128 (-56.2 to 262) *	0.1	Deg	-15 (5)	5 (41)
P-23	Log Probe Type	0 = Off. 1 = Logging. 2 = Logging/Alarm			Off	Off



Please ensure all power is switched off before installing or maintaining this product.

Number	Parameter	Range °C (°F)	Step	Units	Def. LT °C (°F)	Def. HT °C (°F)
P-24	Slug Log Probe	0 = Off. 1 = On			Off	Off
P-25	Log Alarm Delay	00:00 to 99:00	01:00	mm:ss	20:00	20:00
P-26	Log UT Alarm	-49 to 128 (-56.2 to 262) *	0.1	Deg	-35 (-31)	-1 (30.2)
P-27	Log OT Alarm	-49 to 128 (-56.2 to 262) *	0.1	Deg	-12 (10.4)	6 (42.8)
P-28	Buzzer Mode	0 = Off. 1 = On			On	On
P-40	Defrost Mode	0 = Local. 1 = Remote. 2 = External			Local	Local
P-41	Defrost Start	00:00 to 23:59	00:01	hh:mm	01:00	01:00
P-42	Defrosts per Day	0 to 8	1		6	6
P-43	No Defrost Time	0 to 180	1	hours	12	12
P-44	Def Terminate	-42 to 30 (-43.6 to 86)	0.1	Deg	14 (57.2)	10 (50)
P-45	Def Min Time	00:00 to 99:00	01:00	mm:ss	05:00	05:00
P-46	Def Max Time	00:00 to 99:00	01:00	mm:ss	24:00	24:00
P-47	Drain Down	00:00 to 24:00	00:15	mm:ss	01:30	01:30
P-48	Recovery Time	00:00 to 99:00	01:00	mm:ss	30:00	30:00
P-89	Pump Down Time	00:00 to 99:00	01:00	mm:ss	00:00	00:00
P-86	Fan Delay Mode	0 = Time, 1 = Temp	1		Time	Time
P-49	Fan Delay Time	00:00 to 99:00	01:00	mm:ss	03:00	00:00
P-88	Fan Delay Temp	-42 to 30 (-43.6 to 86)	0.1	Deg	-20 (-4)	0.0 (32)
P-50	Fans In Defrost	0 = Off. 1 = On	1		Off	On
P-91	Defrost Type	0 = Elec. 1 = Elec CIn	1		0	0
P-94	Defrost Hold	0 = Off. 1 = On	1		0	0
P-96	Defrost Skip	0 = Off. 1 = On	1		0	0
P-97	Defrost Skip Time	00:00 to 99:00	01:00	mm:ss	12:00	12:00
P-80	Door alarm dly	00:00 to 99:00	01:00	mm:ss	20:00	20:00
P-81	Door Closes LL	0 = No. 1 = Yes	1		No	No
P-82	Door Stops Fan	0 = No. 1 = Yes	1		No	No
P-60	Lights Mode	0 = Local. 1 = Remote	1		Local	Local
P-61	Sun Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-62	Sun Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00
P-63	Mon Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-64	Mon Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00
P-65	Tue Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-66	Tue Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00
P-67	Wed Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-68	Wed Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00
P-69	Thu Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-70	Thu Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00
P-71	Fri Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-72	Fri Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00
P-73	Sat Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-74	Sat Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00
dFLt	Restore default values					

*Note: Only PT1000 probes read up to +128 Degrees
NTC probes read up to -49 to +60 degrees C



Please ensure all power is switched off before installing or maintaining this product.

Parameter table for EEV Type

Number	Parameter	Range °C (°F)	Step	Units	Def. LT °C (°F)	Def. HT °C (°F)
P-01	Cut-in Temp	-42 to 30 (-43.6 to 86)	0.1	Deg	-20 (-4)	0.0 (32)
P-02	Diff	0 to 10 (0 to 18)	0.1	Deg	2 (3.6)	1.5 (2.7)
P-03	Control Weight	0 to 100	1	%	50	50
P-04	Display Weight	0 to 100	1	%	50	50
P-08	Superheat Ref	0 to 12 (0.0 to 21.6)	0.1	Deg	6 (10.8)	6 (10.8)
P-09	Response On	1 to 30	1		10	10
P-10	Response Off	1 to 30	1		10	10
P-11	Control Type	0 (EEV). 1 (EET). 2 (EEV/T)	1		0	0
P-17	Evap select	0 (Local). 1 (Rem 1). 2 (Rem 2). 3 (Rem 3). 4 (Trans V) 5.(Trans mA). 6. (Cust V). 7. (Cust mA).	1		0	0
P-51	EEV Min Opening	0 to 100	1	%	10	10
P-52	Superheat Problem	0.0 to 12.0	0.1	Deg	0.0	0.0
P-53	EEV Problem Opening	0 to 100	1	%	10	10
P-54	EEV Problem Time	00:00 to 99:00	01:00	mm:ss	03:00	03:00
P-56	EEV Start Opening	0 to 100	1	%	10	10
P-55	Ave Valve Opening	0 to 100	1	%	100	100
P-57	Div Value	0 to 100	1	%	50	50
P-85	Key-switch Mode	Not Used	-		-	-
P-87	Control Probe type	0 = Use Air on Probe 1 = Use Log Probe	1		0	0
P-90	Resistor Case Off	0 = Disabled. 1 = Enabled			0	0
P-92	Fans temperature mode	0 = Off 1 = Temperature 2 = Over-temperature 3 = Temp/OT	1		0	0
P-93	Fans Off Temperature	-42 to 30 (-43.6 to 86)	0.1	Deg	-10 (14)	8 (46.4)
P-83	Fan Control	0 (Off). 1 (Run). 2 (Pulse)	1		1	1
P-78	Fan Pulse On	00:00 to 99:00	01:00		05:00	05:00
P-79	Fan Pulse Off	00:00 to 99:00	01:00		30:00	30:00
P-77	Control Fail Valve	0 to 100	0.1	%	0.0	0.0
P-98	Control Fail On/Off	00:00 to 10:00	01:00	mm:ss	00:00	00:00
P-29	Probe 1 Operation (Digital Input)	0 = Plant Fault 1 = External Defrost Input	1		0	0
P-18	Service Time	0 to 128	1	K Hrs	60	60
P-95	Trap Stops LLV/Fans	0 (No). 1 (Yes)	1		0	0
P-99	Load Shedding	0 (Off). 1 (Mode 1). 2 (Mode 2)	1		0	0
P-35	Display Pin	0 - 999 (0 = off)	1		0	0
P-20	Alarm Delay	00:00 to 99:00	01:00	mm:ss	20:00	20:00
P-21	UT Alarm	-49 to 60 (-56.2 to 140)	0.1	Deg	-30 (-22)	-2 (28.4)
P-22	OT Alarm	-49 to 60 (-56.2 to 140)	0.1	Deg	-15 (5)	5 (41)
P-23	Log Probe Type	0 = Off. (Logging with no alarms) 1 = Logging (Probe Fault alarm only)			Off	Off



Please ensure all power is switched off before installing or maintaining this product.

Number	Parameter	Range °C (°F)	Step	Units	Def. LT °C (°F)	Def. HT °C (°F)
		2 = Logging/Alarm (Prb Flt and OT/UT)				
P-24	Slug Log Probe	0 = Off. 1 = On			Off	Off
P-25	Log Alarm Delay	00:00 to 99:00	01:00	mm:ss	20:00	20:00
P-26	Log UT Alarm	-49 to 60 (-56.2 to 140)	0.1	Deg	-35 (-31)	-1 (30.2)
P-27	Log OT Alarm	-49 to 60 (-56.2 to 140)	0.1	Deg	-12 (10.4)	6 (42.8)
P-28	Buzzer Mode	0 = Off. 1 = On			On	On
P-40	Defrost Mode	0 (Local), 1 (Remote), 2 (External)			Local	Local
P-41	Defrost Start	00:00 to 23:59	00:01	hh:mm	01:00	01:00
P-42	Defrosts per Day	0 to 8	1		6	6
P-43	No Defrost Time	0 to 25	1	hours	12	12
P-44	Def Terminate	-42 to 30 (-43.6 to 86)	0.1	Deg	14 (57.2)	10 (50)
P-45	Def Min Time	00:00 to 99:00	01:00	mm:ss	05:00	05:00
P-46	Def Max Time	00:00 to 99:00	01:00	mm:ss	24:00	24:00
P-47	Drain Down	00:00 to 24:00	00:15	mm:ss	01:30	01:30
P-48	Recovery Time	00:00 to 99:00	01:00	mm:ss	30:00	30:00
P-89	Pump Down Time	00:00 to 99:00	01:00	mm:ss	00:00	00:00
P-86	Fan Delay mode	0 = Time 1 = Temp	1		0	0
P-49	Fan delay	00:00 to 99:00	01:00	mm:ss	03:00	03:00
P-88	Fan Delay Temp	-42 to 30 (-43.6 to 86)	0.1	Deg	-20 (-4)	0.0 (32)
P-50	Fans In Defrost	0 = Off. 1 = On			On	On
P-91	Defrost Type	0 (Elec). 1 (Elec/Cin)	1		0	0
P-94	Defrost Hold	0 = Off. 1 = On			Off	Off
P-96	Defrost Skip	0 (Off). 1(On)	1		0	0
P-97	Defrost Skip Time	00:00 to 99:00	01:00	mm:ss	12:00	12:00
P-80	Door alarm delay	00:00 to 99:00	01:00	mm:ss	20:00	20:00
P-81	Door Closes EEV	0 = No. 1 = Yes			No	No
P-82	Door Stops Fan	0 = No. 1 = Yes			No	No
P-60	Lights Mode	0 (Local), 1 (Remote)			Local	Local
P-61	Sun Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-62	Sun Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00
P-63	Mon Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-64	Mon Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00
P-65	Tue Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-66	Tue Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00
P-67	Wed Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-68	Wed Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00
P-69	Thu Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-70	Thu Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00
P-71	Fri Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-72	Fri Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00
P-73	Sat Lights On	00:00 to 23:59	00:01	hh:mm	08:00	08:00
P-74	Sat Lights Off	00:00 to 23:59	00:01	hh:mm	20:00	20:00
P-30	Broadcast ID	0 to 999	1		0	0
P-31	Refrigerant	See Refrigerant Table Below	1		0	0
P-32	Pressure Units	0 (Absolute). 1 (Gauge)	1		1	1
P-33	Evap Offset	0.0 to 5.0 (0.0 - 72.5)	0.1	bar (psi)	0.0	0.0
P-34	Glide	0.0 to 15.0 (-56.2 - 262.4)	0.1	Deg	0.0	0.0
P-36	Ref Weight	0 to 100	1	%	0	0
P-37	MOP Cut-In	-3.4 - 180 (-49.3 - 2610)	0.1	bar (psi)	3.4	3.4
P-38	MOP Diff	-3.4 - 180 (-49.3 - 2610)	0.1	bar (psi)	0.3	0.3
P-39	MOP Delay	00:00 - 02:00	00:01	mm:ss	00:05	00:05



Please ensure all power is switched off before installing or maintaining this product.

Number	Parameter	Range °C (°F)	Step	Units	Def. LT °C (°F)	Def. HT °C (°F)
P-150	Custom A1	-999.9 to +999.9	1		0	0
P-151	Custom B1 High	-999.9 to +999.9	1		-220	-220
P-152	Custom B1 Low	0.0 to +999.9	1		384	384
P-153	Custom C1	-999.9 to +999.9	1		262.5	262.5
P-154	Custom A2	-999.9 to +999.9	1		0	0
P-155	Custom B2 High	-999.9 to +999.9	1		-220	-220
P-156	Custom B2 Low	0.0 to +999.9	1		384	384
P-157	Custom C2	-999.9 to +999.9	1		262.5	262.5
P-101	Transducer Span	-3.4 to 180	0.1	bar (psi)	13.8	13.8
P-102	Transducer Offset	-3.4 to 180	0.1	bar (psi)	0.0	0.0
P-103	Evap Cust Offset	0.0 to 20.0	0.1		0.0	0.0
P-104	Evap Cust High	0.0 to 20.0	0.1		0.0	0.0
P-58	EEV Scale	0 to 100	1	%	100	100
dFLt	Restore default settings					

Refrigerant Table

0 = None. 1 = Custom. 2 = R32. 3 = R134A. 4 = R142B. 5 = R227. 6 = R401A. 7 = R401B. 8 = R401C. 9 = 402A. 10 = R402B. 11 = R404A. 12 = R407A. 13 = R407B. 14 = R407C. 15 = R500. 16 = R502. 17 = R503. 18 = R507. 19 = R717. 20 = R290. 21 = R744. 22 = R407F. 23 = R410A. 24 = R449A. 25 = R513A. 26 = R454C. 27 = R455A.

Parameters Description

Number	Parameter	Description
P-01	Cut-in Temp	Temperature at which the LLV, EEV or compressor will switch on
P-02	Diff	Differential temperature below the cut-in temperature. The LLV or lead compressor switches off when below this temperature
P-03	Control Weight	Percentage of the Air-On temperature that is used to calculate the control temp. The remaining percentage will be used on the Air-Off temperature Example, P-03 set to 30% Control temp = 30% Air-on + 70% Air-off
P-04	Display Weight	As above only applied to the display temperature
P-08 (EEV)	Superheat Ref	The EEV controller will attempt to maintain this superheat value. (applies only to the EEV version)
P-08 (LLV)	Probe 2 Type	On the LLV version probe 2 can be selected as the defrost termination probe instead of the air off probe. When set to defrost probe the air on probe alone is used as the control and temperature alarm probe.
P-09	Response On	Allows the user to speed up the EEV on time. With 30 providing the quickest response and 1 providing the slowest response.
P-10	Response Off	Allows the user to speed up the EEV off time. With 30 providing the quickest response and 1 providing the slowest response.
P-11	Control Type	Allows the user to select either EEV control, EET control or EEV/EET control. Note the Evaporator Temperature probe should be fitted to the coldest point in the evaporator. EEV uses the superheat as its main reference with the cabinet temperature as a secondary control. EET use the cabinet temperature as its main reference. EEV/EET uses cabinet temperature as the main control until the SH gets close to the SH reference point, then it switches to EEV control, it switches back to EET control when the SH reference is satisfied.
P-17	Evap select	Local – Uses local probes



Please ensure all power is switched off before installing or maintaining this product.

Number	Parameter	Description
		<p>Rem1 – Uses section 1 pressure from plant pack selected OR If no plant pack can use Mercury Switch pressure</p> <p>Rem2 - Uses section 2 pressure from plant pack selected</p> <p>Rem3 - Uses section 3 pressure from plant pack selected</p> <p>Trans V – Uses a 0-10v pressure transducer connected directly to the controller</p> <p>Trans mA - Uses a 4-20mA pressure transducer connected directly to the controller.</p> <p>Cust V - Uses a voltage pressure transducer with a custom voltage input connected directly to the controller</p> <p>Cust mA - Uses a milliamp pressure transducer with a custom mA input connected directly to the controller</p> <p>See: EEV Control using Pressure</p>
P-51	EEV Min Opening	<p>Sets the minimum valve opening level, during normal operation the valve will not go below this level. (Default 10%)</p> <p>IF used in conjunction with a Mercury Pressure Hub PR0018-PHI, remote pressure from Plant Pack or local pressure from a daughter card, then the Minimum value should be set at 0%</p>
P-52	Superheat Problem	<p>Sets the point at which the algorithm will go to the “EEV Problem” state due to the superheat temperature. For example if this parameter is set to 0 Degrees and the Superheat value falls to 0 degrees or below, for the duration of P-54, then the controller will enter the superheat problem state.</p>
P-53	EEV Problem Opening	Sets the valve open position when entering the “Superheat EEV Problem” state.
P-54	EEV Problem Time	Sets the time the algorithm stays in the “Superheat EEV Problem” state.
P-56	EEV Start Opening	Sets the valve opening % which is used after a defrost or when the controller exits a problem state for, example Superheat EEV Problem state
P-55	Ave Valve Opening	<p>Normally the valve during recovery will open to the last average position. This setting allows for that value to be reduced by said percentage. For example if the average valve opening is calculated as 80% and P-55 is set to 50% then the valve will open at 40%.</p>
P-57	Div Value	<p>This parameter only takes effect when the controller is used in conjunction with a Mercury Switch pressure application. When the Mercury Switch generates the MOP alarm the controller reduces the maximum valve opening to this percentage. For example if this parameter is set to 50% and the MOP alarm is generated then the maximum valve opening will be limited to 50%. Therefore as the controller pulses the valve the maximum the valve will open is 50%.</p> <p>Note P-51 EEV Minimum opening overrides the valve output operation and the valve will not pulse below this setting.</p> <p>Please see MOP note.</p> <p>Please note parameters P-51 through to P-57 should not be altered without first understanding the effects they may have on the case operation. If incorrectly set they may have undesired affects.</p>
P-85	Key switch mode	Not used on the coldroom panel.
P-87	Control Probe type	Switches between using the air-on probe or the logging probe. Note the control and display temperature will still be a derivative of the weighted Average of the control probe + Air-off probe
P-90	Resistor Case Off	Turns on/off the switched resistor case off function
P-92	Fans temperature mode	<p>Allows the user to set the fans to turn off when: -</p> <ul style="list-style-type: none"> ➤ A pre-determined temperature is reached (P93) ➤ When an over-temperature alarm is present ➤ When either P93 is reached or an OT alarm is present
P-93	Fans Off Temperature	Temperature for the above (P92) operation. Use the defrost probe.
P-83	Fan Control	<p>This feature allows for coldroom fans to be stopped when the coldroom is down to temperature thus saving energy. This feature is present in both the M and E software.</p> <ul style="list-style-type: none"> ➤ Run – fans operate as per the normal control strategy. ➤ Pulse – When the LLV closes the fans will stop when the Fan Pulse On parameter (P-78) time expires. The fans then remain off for the Fan Pulse Off time (P-79). When the parameter Fan Pulse Off time expires the fans come back on for the Fan Pulse on time. The cycle then repeats. The fans resume normal operation if the LLV operates. The fans pulse on/off to ensure the circulation of air within the coldroom.



Please ensure all power is switched off before installing or maintaining this product.

Number	Parameter	Description
		<ul style="list-style-type: none"> ➤ Off – When the LLV closes the fans stay on for the Fan Pulse On (P-78) time before going off until the LLV next operates. Placement of the temperature control probes is important when using this feature
P-78	Fan Pulse On	The duration of the fans are pulsed on in Fan Control.
P-79	Fan Pulse Off	The duration of the fans are pulsed off in Fan Control.
P-77	Control Fail Valve	This value is used in the event of a control probe fail; In the EEV control algorithm the valve will remain at this opening until the probe fault has been cleared. Please note the incorrect setting of this value may result in flood back causing damage to the pack compressors. Do not adjust this parameter if you are unsure of the consequences. In M software this is the value to which the LLV/compressor relay will be pulsed open/closed. For example if set to 2 minutes then the LLV will be open for 2 minutes and then closed for two minutes. This process will continue until the control probe fail has been rectified.
P-98	Control Fail On/Off	Set to '0' to disable. If the valve control temperature fails, setting the value in minutes will turn on and off the valve for the stated time period. The valve will cycle on/off until control has been returned.
P-29	Probe 1 Operation	<p>Plant - when a fixed resistor is switched in across the appropriate input a plant fault alarm is generated.</p> <p>External Defrost - when a fixed resistor is switched in across the appropriate input then it places the controller into defrost. See also P-40 for setup. If the defrost signal is continually present after completing the initial defrost then the controller will resume refrigeration. If the defrost signal remains active then the controller will initiate a defrost and generate a missed defrost alarm when the no defrost time parameter expires. Subsequent defrosts will follow the no defrost time until the defrost input is removed.</p>
P-18	Service Time	Time (in 1000 x hours) before the service icon (Spanner icon) comes on. The Run Hours timer increments based on the number of hours the controller has been powered up and running. Reset the spanner icon to off by changing this parameter to 0 and then back to the desired service interval. This process also resets the Run Hours value to 0. To view the current Run Time value refer to the I/O list.
P-95	Trap Stops LLV/Fans	When man trap input is activated the LLV closes and Fans are stopped. Normal operation resumes when the mantrap input is deactivated.
P-99	Load Shedding	<ul style="list-style-type: none"> ➤ Off – Feature is not used ➤ Mode 1 – Case goes to "CO2 Load Shedding Case Off Mode" ➤ Mode 2 – Goes to Case Clean Mode See: Load Shedding
P-35	Display Pin	Feature used for restricting access to settings menu via controller display. '0' disables the feature. A pin can be set between 1 and 999. The pin must be entered to access the menus. On non-networked units, if the pin is lost, RDM technical can be contacted to assist retrieval.
P-20	Alarm Delay	Delay for the over and under-temperature alarms
P-21	UT Alarm	Under temperature alarm set point. This alarm uses the control temperature.
P-22	OT Alarm	Over temperature alarm set point. This alarm uses the air-off temperature or if there is no air off probe used (see P-08) then the air on probe is used.
P-23	Log Probe Type	0 = Off. (Logging with no alarms) 1 = Logging (Probe Fault alarm only) 2 = Logging/Alarm (Prb Flt and OT/UT)
P-24	Slug Log Probe	Applies a damping factor. This can be used to make a standard probe have the same temperature response as a Product probe.
P-25	Log Alarm Delay	Delay for the Logging probe over and under-temperature alarms
P-26	Log UT Alarm	Logging probe under temperature alarm set point
P-27	Log OT Alarm	Logging probe over temperature alarm set point
P-28	Buzzer Mode	Allows the user to turn the local alarm buzzer off. Note: entrapment alarms will sound the buzzer irrespective of this parameter setting, if muted it will sound again after a one minute delay.
P-40	Defrost Mode	Allows the user to set the defrost mode: - <ul style="list-style-type: none"> ➤ Local (Uses the internal parameters P-41 and P-42)



Please ensure all power is switched off before installing or maintaining this product.

Number	Parameter	Description
		<ul style="list-style-type: none"> ➢ Remote (Requires a defrost schedule in the front end) ➢ External (Requires an external signal on the appropriate input) If set to Local or Remote the external defrost input will be ignored.
P-41	Defrost Start	When defrost mode is set to "Local", this is the start time for the 1st defrost
P-42	Defrosts per Day	When defrost mode is set to "Local", this is the number of defrosts per day equally spaced from the start time.
P-43	No Defrost Time	If the controller misses a defrost command for any reason, a defrost will initiate after this time has elapsed from the last defrost. Normally set to 1 hour over the normal defrost period.
P-44	Def Terminate	The defrost will terminate (defrost control relay off) when the temperature of the defrost termination probe reaches this value. If the "defrost termination" probe is not fitted, defrost termination will occur when: - The "coil in" probe reaches the set point (If fans are selected as "off during defrost") Or The "air off" probe reaches the set point (If fans are selected as "on during defrost") If the "coil in" probe is not fitted, the "air off" probe will be used.
P-45	Def Min Time	Minimum time that a defrost will use (Defrost can't terminate until this time has elapsed. If termination temperature is reached during this period, the defrost control relay is turned off, but the controller will not continue the defrost cycle until the end of the defrost min period)
P-46	Def Max Time	Time period after defrost minimum that defrosts are allowed to terminate
P-47	Drain Down	A period after defrost max to allow the draining of any surplus water
P-48	Recovery Time	The LLV is switched on at the start of this period to allow the temperature to recover to the normal operating point. This period also inhibits the OT alarm. Note that if the air-off temperature is still above the OT alarm setpoint when this period expires, an immediate OT alarm occurs; there is not a further alarm delay.
P-89	Pump Down Time	Time period before the defrost min period to allow for a pump down
P-86	Fan Delay mode	This parameter allows the fans start after a drain-down period to be delayed, either by time (P-49) or when the temperature point (P-88) is reached. This parameter uses the same probe strategy as the defrost terminate.
P-49	Fan Delay	Time after a drain-down period before the fans start if P-86 is set to time
P-88	Fan Delay Temp	Temperature at which the fans start after a drain-down period when P-86 is set to temperature.
P-50	Fans In Defrost	Allows the user to set the fans on or off in defrost. Note: If the fans are set to on in defrost, they will go off for the drain-down period and then follow the P-86 rules.
P-91	Defrost Type	Electric – Heater is turned Off when termination probe reaches termination temperature Electric Cin – Heater cycles on and off in defrost min if termination probes reaches termination temperature but then falls below it again
P-94	Defrost Hold	Turns the defrost hold feature on and off. When switched on, the controller can be held in defrost until a remote command from the front end terminates the defrost and starts the recovery process. Note: defrosts will also terminate when the defrost max time-out period elapses. This command works in "Defrost Remote" only
P-96	Defrost Skip	Allows user to enable/disable defrost skip. This feature allows the controller to skip defrosts. If the current defrost terminates on temperature then the controller will skip the next scheduled defrost providing the previous defrost terminated before the defrost skip time (P-96). Operates only when the controller is set to local defrost scheduling.
P-97	Defrost Skip Time	Time factor used in defrost skip. The previous defrost has to terminate before this value expires to allow the controller to skip a defrost.
P-80	Door alarm delay	Delay after the door open input is activated before the alarm occurs. If P-81 and P-81 are set to switch cooling and fans off when the door is open, this will be overridden.
P-81	Door Closes Valve	This parameter is used to close the LLV or EEV if the door opens.
P-82	Door Stops Fan	This parameter is used to stop the fans if the door opens.



Please ensure all power is switched off before installing or maintaining this product.

Number	Parameter	Description
P-60	Lights Mode	Allows the user to set the lights mode: - <ul style="list-style-type: none"> ➢ Use a local schedule P-61 to P-74) ➢ Use a remote schedule (Set up in the system front end)
P-61	Sun Lights On	When P-60 is set to Local, Sunday on time
P-62	Sun Lights Off	When P-60 is set to Local, Sunday off time
P-63	Mon Lights On	When P-60 is set to Local, Monday on time
P-64	Mon Lights Off	When P-60 is set to Local, Monday off time
P-65	Tue Lights On	When P-60 is set to Local, Tuesday on time
P-66	Tue Lights Off	When P-60 is set to Local, Tuesday off time
P-67	Wed Lights On	When P-60 is set to Local, Wednesday on time
P-68	Wed Lights Off	When P-60 is set to Local, Wednesday off time
P-69	Thu Lights On	When P-60 is set to Local, Thursday on time
P-70	Thu Lights Off	When P-60 is set to Local, Thursday off time
P-71	Fri Lights On	When P-60 is set to Local, Friday on time
P-72	Fri Lights Off	When P-60 is set to Local, Friday off time
P-73	Sat Lights On	When P-60 is set to Local, Saturday on time
P-74	Sat Lights Off	When P-60 is set to Local, Saturday off time
P-30	Broadcast ID	ID of Plant Controller being used to broadcast Suction Pressure The Broadcast ID is derived from the Rotary Switch positions set on the Plant controller which is providing the remote suction pressure. Note: No two Plant controllers on a local area network can have the same rotary switches positions set. This will have adverse affects on control.
P-31	Refrigerant	Type of refrigerant used in system. See: Refrigerant Table above
P-32	Pressure Units	Absolute or Gauge
P-33	Evap Offset	Offset to allow for pressure drop over distance
P-34	Glide	Allows the calculated temperature to be offset by subtracting the P-34
P-36	Ref Weight	When using a local pressure transducer or a transmitted pressure from a pack controller is used to calculate superheat, the Mercury controller can use a weighted average of liquid pressure and vapour pressure to calculate the temperature. When the refrigerant weight parameter is set to 0% then the liquid pressure is used (bubble), when set to 100% the vapour pressure is used (dew). For example, when the Ref Weight parameter is set to 50%, then the controller will use a weighted average of 50% liquid pressure and 50% vapour pressure. Any percentage from 1 to 99% will give an appropriate weighted average between the two pressures.
P-37	MOP Cut-In	If the pressure exceeds this value, then the controller's valve will close or be reduced to a predetermined percentage. A MOP alarm is also created.
P-38	MOP Diff	When the pressure reduces below this value, the controller's valve will recover to their normal operational
P-39	MOP Delay	Delay after the MOP value has been exceeded before the MOP actions and alarm occurs.
P-150	Custom A1	The controller has 28 refrigerant pressure to temperature look up tables pre programmed which are selectable using the P-31 "Refrigerant" parameter. If an additional gas type is required which is not listed then P-31 can be set to "Custom" which allows a custom gas type to be entered. RDM technical support can supply the relevant values for P-150 to P-157 if required.
P-151	Custom B1 High	
P-152	Custom B1 Low	
P-153	Custom C1	
P-154	Custom A2	
P-155	Custom B2 High	
P-156	Custom B2 Low	
P-157	Custom C2	
P-101	Transducer Span	This is the total range of a directly connected pressure transducer. An RDM PR0160 -1 to 20 Bar transducer would have a span of 21 Bar for example.
P-102	Transducer Offset	This is the offset below 0 of a directly connected pressure transducer. An RDM PR0160 -1 to 20 Bar transducer would have an offset of -1.
P-103	Evap Cust Offset	If P-17 is set to "Cust V" or "Cust mA" then the input voltage or current of a directly connected pressure transducer can be user defined. As an example, if a 0.5v to 4.5v transducer is being used then P-17 would be set to "Cust V", the "Evap Cust Offset" parameter P-103 would be set to 0.5 and the "Evap Cust High" parameter P-104 would be set to 4.5.
P-104	Evap Cust High	



Please ensure all power is switched off before installing or maintaining this product.

Number	Parameter	Description
P-58	EEV Scale	Reduces the output valve opening percentage by this amount, this can be used to compensate for an oversized valve being used. When the EEV scale parameter is set at 100% (default) and the control strategy requires the valve to be open 50%, the valve will cycle on for 3 seconds and off for 3 seconds. If the EEV scale parameter is then reduced to 50% then the valve will cycle on for 1.5 seconds and off for 4.5 seconds.
dFLt	Restore default values	Restores all of the parameters to their default values

Load Shedding

Used on CO2 sites for load shedding on CO2 Compressor Faults or CO2 Vessel High Pressure Alarms.

Cases can be put into a "CO2 Case Off" mode which will open the LLV/EEV and stop the fans to reduce the load on the pack or to reduce the CO2 vessel pressure.

See: RDM CO2 load shedding user guide.

EEV Control Using Pressure

There are several ways to use the suction pressure to calculate the evaporator in temperature.

Mercury Switch (PR0018-PHI)

(P-17 set to Rem1) The Mercury Switch can be used for EEV control on an Island by island basis. A suction pressure transducer is connected from the case Island to the 4-20mA input of the Mercury Switch and the pressure read from this transducer is converted to a temperature based on the gas type being used by the system. This temperature is transmitted to each controller connected to the switch and along with the suction temperature probe local to the controller, the superheat is calculated. Please note that RDM recommended that the evaporator in temperature probe is fitted as the controller will use this to calculate the superheat in the event of a communication loss with the Mercury Switch. P-17 allows for the use of this remote temperature provided by the Mercury Switch. Please see the Mercury Switch user document (PR0018-PHI) for further details.

Remote pressure Direct from a Plant Pack Controller

(P-17 set to Rem1, Rem2 or Rem3 depending on which input the suction transducer is connected to on the plant controller, transducer input 1, 2 or 3)
(P-30) set to ID of Plant Pack Controller (Rotary Switch Setting), (P-31) set to refrigerant type, (P-32) set to pressure units Absolute or Gauge.

Local Analogue Input – mA or V

(P17 set to Trans mA / Trans V / Cust V / Cust mA)
(Transducer Span, Offset and refrigerant type must be set accordingly)

A suction transducer can be connected directly to the analogue input of the controller (factory fit option) and used to calculate the evaporator temperature from the suction pressure, and along with the suction temperature probe local to the controller, the superheat is calculated. Please note that RDM recommend that the evaporator in temperature probe is fitted as the controller will use this to calculate the superheat in the event of a transducer fault.

Maximum Operating Pressure

Maximum Operating Pressure (MOP) support added to coldroom software. In an EEV application the remote evaporator in value is obtained from the Mercury switch on which the coldroom panel is connected. MOP is a remote command sent from the Mercury switch to the coldroom panel to close the EEV valve when a predetermined pressure is reached. This MOP value is configured in the Mercury switch setup. MOP is also used in the M software and although a remote evaporator temperature is not used the LLV can be closed when the MOP value is reached.



Please ensure all power is switched off before installing or maintaining this product.

Relay State and functional operation

Relay State:	Function State	Wired contact	Comments
Compressor/LLV Relay off	Valve on	N/C	
Compressor/LLV Relay on	Valve off	N/C	
EEV Energised	Valve on	N/O	
EEV De energised	Valve off	N/O	
Fans Relay off	Fans on	N/C	
Fans Relay on	Fans off	N/C	
Lights Relay off	Lights on	N/C	
Lights Relay on	Lights off	N/C	
Defrost Relay off	Defrost off	N/O	
Defrost Relay on	Defrost on	N/O	
Alarm Relay off	Alarm on	N/C	
Alarm Relay on	Alarm off	N/C	

The panel will display Pd (pull-down) on early versions, or REC (recovery) on newer versions just after switching on until the control temperature has been reached; where it will then display the temperature (display temp). The panel will operate in accordance to the parameters set.

Lights: If the lights have been set to a timer mode, the lights LED will flash to indicate the timer is running during an "on" period, the lights will come on when the door is opened, or if the lights switch is operated. The lights LED will be off during a timer "off" period and the lights will not come on when the door is opened. The lights can be switched on during the off period by the panel light switch.

Note. When using the lights in "remote" mode, do **not** use a GP timer input over-ride function; it will conflict with the local over-rides and door switch functions. When a person trapped alarm occurs the lights are forced on.

Note: When a person trapped alarm occurs it now pulses for 2 seconds on, 1 second off to distinguish from all other alarms.

If either or both of the LLV and Fans are set to go off when the door opens, they will revert to normal operation when the door closes or when the door-open alarm activates.

Network Configuration

The final section to setup is the network address. In all instances, this must be done before the controller is plugged into the site network. The controllers have an auto-initialise function, which will automatically log the device onto the site network. If the wrong address has been entered onto the network, you will have to reset the controller address by setting the address to 00-0, and then re-enter the correct address. (You may have to deregister the wrong address from the home system as well).

To log the controller onto a network you must first connect the controller to a communications module if one is not already internally fitted coldroom panel. This is either a:

- 485 Legacy, or
- IP Futura
- Mercury Hub

Please check [Part Numbers](#) section to determine the communication module fitted.

485 Legacy module

485 legacy support the following protocol:

- Genus

Connecting a 485 legacy module to the controller will govern which set up screens are made available.



Please ensure all power is switched off before installing or maintaining this product.

Display	Option
485t	485 Network Type
485A	485 Address/Name
gAdd	Show underlying network address assigned to controller
rLog	Re-log the controller back onto the network
CLrA	Clear the address/name from the controller
ESC	Exit network menu. N.B. this option must be selected to save any changes made in this menu

The 485t option shows a value representing the network type. In this controller there is only one type which cannot be changed:

Value	Network Type
1	Genus compatible (all versions)

The 485A option shows a value representing either the name of the controller in a Genus compatible network.

The value shown is of the form 05-6. This means the controller would try to log onto a Genus compatible network using the name 'RC05-6'.

The following options are also available when the network type is set to Genus compatible.

The gAdd option displays (in hexadecimal format) the underlying network address assigned to the controller when it was logged onto the network.

The rLog option allows the controller to be logged back onto the network with its current name. The 'rLog' message will flash for confirmation. Press the Enter button to execute the command, Up or Down buttons to cancel.

Fast Network Address Reset

The CLrA option will clear out the network address and name in the controller. The 'CLrA' message will flash for confirmation. Press the Enter button to execute the command, Up or Down buttons to cancel.

To enter this mode, hold the Enter, Up and Down buttons together for approximately 3 seconds until the message CLrA appears on the display. CLrA is the first option in the menu consisting of the following options:

Display	Option
CLrA	Clear the address/name from the controller
ESC	Exit Setup mode

Pressing the Enter button to select the CLrA option will cause the 'CLrA' message to flash for confirmation, if the network type is set to Genus compatible. Press the Enter button to execute the command, Up or Down buttons to cancel. If the network type is not set to Genus compatible then the CLrA message will not flash and the ESC option can be used to exit the menu.

IP Futura module

In an IP system there are two options

- IP-L
- IP-r

IP-L allows you to fix an IP address into the controller, which you would use when you are connecting the controllers onto a customer's local area network. This would allow the customer to view each controller using Internet Explorer

IP-r allows you to give each controller on the system a unique number. This number is then allocated a dynamic IP address by the system DHCP server (such as the RDM Data Director)

IP-L

To configure the communication module for IP-L, set all three rotary switches to zero. The module should then be connected to the controller.

1. nEt. From the function menu you can now select nEt



Please ensure all power is switched off before installing or maintaining this product.

- Press enter and the display will show "IP-L", press enter
- You can now set the address using the table below

Display	Option
IP-1	IP Address byte 1
IP-2	IP Address byte 2
IP-3	IP Address byte 3
IP-4	IP Address byte 4
nL	Network Mask Length
gt-1	Gateway Address byte 1
gt-2	Gateway Address byte 2
gt-3	Gateway Address byte 3
gt-4	Gateway Address byte 4
ESC	Exit network menu. N.B. this option must be selected to save any changes made in this menu

To ease setup, a single network mask length value is used. If the address has been specified with a network mask value in dotted IP format e.g. 255.255.255.0 then the table below gives the conversion:

Mask	Length	Mask	Length	Mask	Length
		255.255.254.0	23	255.254.0.0	15
255.255.255.252	30	255.255.252.0	22	255.252.0.0	14
255.255.255.248	29	255.255.248.0	21	255.248.0.0	13
255.255.255.240	28	255.255.240.0	20	255.240.0.0	12
255.255.255.224	27	255.255.224.0	19	255.224.0.0	11
255.255.255.192	26	255.255.192.0	18	255.192.0.0	10
255.255.255.128	25	255.255.128.0	17	255.128.0.0	09
255.255.255.0	24	255.255.0.0	16	255.0.0.0	08

IP-r

To configure the communication module for IP-r, set the three rotary switches to give each controller a unique identifier. The module should then be connected to the controller and the network.

2. nEt. From the function menu you can now select nEt
 - Press enter and the display will show "IP-r", press enter
 - You can now view only the address given by the DHCP server

Mercury Hub

Please refer to the Mercury Hub user guide, which can be obtained from the RDM website, for information regarding connecting a controller to a network via the Mercury Hub.

Viewing

Apart from setting up the controller, you can also view the status of the inputs and outputs.

1. IO. View Inputs / Outputs and States
 - a. From the function menu, select "IO", press enter
 - b. You can now scroll through the IO tables as set out below. The tables you view will depend on the controller type configuration.



Please ensure all power is switched off before installing or maintaining this product.

Input/Output table for Coldroom Panel with Compressor/LLV option

Number	IO	Range (dependant on probe type) °C (°F)	Step	Units
I-01	Control Temp.	-42 to 60 (-56.2 to 262.4) PT 1000 only	0.1	Deg
I-02	Display temp	-42 to 60 (-43.6 to 140)	0.1	Deg
I-03	Air on Probe	-49 to 60 (-56.2 to 140)	0.1	Deg
I-04	Air off Probe	-42 to 60 (-43.6 to 140)	0.1	Deg
I-05	Evaporator Probe	-42 to 60 (-43.6 to 140)	0.1	Deg
I-06	Suction Line Probe	-42 to 60 (-43.6 to 140)	0.1	Deg
I-07	Superheat	-30 to 60 (-54 to 108)	0.1	Deg
I-08	Logging Probe	-49 to 60 (-56.2 to 140)	0.1	Deg
I-09	Defrost Probe	-42 to 60 (-43.6 to 140)	0.1	Deg
I-10	Plant Fault	0 (OK), 1 (Alarm)		
I-11	Case Clean	0 (Off), 1 (On)		
I-12	Door Sensor	0 (Closed), 1 (Open)		
I-13	Person Trapped	0 (OK), 1 (Alarm)		
I-15	External Defrost	0 (Off), 1 (On)		
I-16	MOP	0 (Off), 1 (On)		
I-25	Load Shedding	0 (Off), 1 (On)		
O-01	Liquid Line Valve	0 (Off), 1 (On)		
O-05	Defrost Control	0 (Off), 1 (On)		
O-07	Case Fans	0 (Off), 1 (On)		
O-08	Lights	0 (Off), 1 (On)		
O-09	Alarm Relay	0 (OK), 1 (Alarm)		
O-10	Last Def. Time	00:00 to 23:59		hh:mm
O-11	Last Def. Length	00:00 to 03:00		hh:mm
O-12	Last Def. Ctrl Temp.	-42 to 60 (-43.6 to 140)	0.1	Deg
O-13	Last Def. Type	0 (None), 1 (Internal), 2 (External), 3 (Network), 4 (Display), 5 (Timed)		
O-18	Run Time	0 to 128	1	K Hrs
O-20	Door Open Time	00:00 to 23:59		hh:mm
O-21	Door Open Length	00:00 to 03:00		hh:mm
O-30	Set Point Offset	-49 to 60 (-56.2 to 140)	0.1	Deg
O-32	Timer	0 (Off), 1 (On)		
O-18	Run Time	0 to 128	1	K Hrs
S-01	Control State	0 (Stabilise), 1 (Normal), 2 (Defrost Min), 3 (Defrost Max), 4 (Drain Down), 5 Fan Delay 6 (Recovery), 7 (OT Alarm), 8 (UT Alarm), 9 (Fans Only), 10 (Lights Only), 11 (Case Off), 12 (Pump_Down), 13 (Df Hold), 14 (Load Shedding)		



Please ensure all power is switched off before installing or maintaining this product.

Input/Output table for Coldroom Panel with EEV option

Number	IO	Range (dependant on probe type) °C (°F)	Step	Units
I-01	Control Temp.	-42 to 60 (-43.6 to 140)	0.1	Deg
I-02	Display temp	-42 to 60 (-43.6 to 140)	0.1	Deg
I-03	Air on Probe	-42 to 60 (-43.6 to 140)	0.1	Deg
I-04	Air off Probe	-42 to 60 (-43.6 to 140)	0.1	Deg
I-05	Evaporator Probe	-49 to 60 (-56.2 to 140)	0.1	Deg
I-06	Suction Line Probe	-49 to 60 (-56.2 to 140)	0.1	Deg
I-07	Superheat	-30 to 60 (-54 to 108)	0.1	Deg
I-08	Logging Probe	-49 to 60 (-56.2 to 140)	0.1	Deg
I-09	Defrost Probe	-49 to 60 (-56.2 to 140)	0.1	Deg
I-10	Plant fault	0 (OK), 1 (Alarm)		
I-11	Case Clean	0 (Off), 1 (On)		
I-12	Door Sensor	0 (Off), 1 (On)		
I-13	Person trapped	0 (OK), 1 (Alarm)		
I-15	Remote Evap In Temp	-49 to 60 (-56.2 to 140)	0.1	Deg
I-14	External Defrost	0 (Off), 1 (On)		
I-16	MOP	0 (Off), 1 (On)		
I-19	Div Input	0 to 100	0.1	%
I-20	Local Evap Temp	-49 to 128 (-56.2 to 262)	0.1	Deg
I-21	Local Pressure	-3.4 to 180.0	0.1	Bar
I-22	Rem Evap Temp	-49 to 128 (-56.2 to 262)	0.1	Deg
I-23	Remote Pressure	-3.4 to 180.0	0.1	Bar
I-25	Load Shedding	0 (Off), 1 (On)		
O-01	Thermostat	0 (Off), 1 (On)		
O-05	Defrost Control	0 (Off), 1 (On)		
O-07	Case Fans	0 (Off), 1 (On)		
O-08	Light Relay	0 (Off), 1 (On)		
O-09	EEV Opening	0 to 100	0.1	%
O-10	Last Def. Time	00:00 to 23:59		hh:mm
O-11	Last Def. Length	00:00 to 03:00		hh:mm
O-12	Last Def. Ctrl Temp.	-42 to 60 (-43.6 to 140)	0.1	hh:mm
O-13	Last Def. Type	0 (None), 1 (Internal), 2 (External), 3 (Network), 4 (Display), 5 (Timed)		
O-15	Alarm Relay	0 (OK), 1 (Alarm)		
O-18	Run Time	0 to 128	1	K Hrs
O-20	Door Open Time	00:00 to 23:59		hh:mm
O-21	Door Open Length	00:00 to 03:00		hh:mm
O-30	Set Point Offset	-49 to 60 (-56.2 to 140)	0.1	Deg
O-32	Timer	0 (Off), 1 (On)		
S-01	Control State	0 (Stabilise), 1 (Normal), 2 (Defrost Min), 3 (Defrost Max), 4 (Drain Down), 5 Fan Delay 6 (Recovery), 7 (OT Alarm), 8 (UT Alarm), 9 (Fans Only), 10 (Lights Only), 11 (Case Off), 12 (Pump Down), 13 (Defrost Hold) 14 (Load shedding)		
S-02	Valve State	0 (Off). 1 (Start). 2 (Run). 3 (Problem). 4 (Fail). 5 (Shed)		



Please ensure all power is switched off before installing or maintaining this product.

Switched Resistor Values for Case Clean and Plant Fault 1 Inputs

For PT1000 probes use 820 Ohm switched resistors. For NTC2K & NTC2K25 probes use a 590 Ohm switched resistor. For NTC10K probes use 2k7 Ohm switched resistors. For NTC10K(2) probes use 2k2 Ohm switched resistors. The resistors used must have a tolerance of 1% or better and the resistor must have a power rating of 0.25W. For improved accuracy whilst using switched resistors RDM recommend resistors with 0.1% accuracy are used. Note the switched resistor features will **not** function when using 470R or 700R probes. When a resistor is switched across the appropriate input it signals to the Mercury to enable the switched resistor function described for that input whilst still recording the probe temperature on the input.

*Resistors must be installed in-line with the switched contacts.

Temperature range for all probe types is -49°C to +60°C for probe inputs which do not have a secondary function (switched resistors). Inputs which have a secondary function are restricted to -42°C to +60°C.

Note: switched resistors will operate in LT (Low Temperature) and HT (High Temperature) applications using PT1000, NTC2K or NTC2K25 probe types only. For all other probe types the switched resistor inputs will work in HT applications only.

Alarm Messages

The following alarms and messages can appear on the Mercury display.

Display Message	System status
Ft	Control Fault
Prb1	Probe 1 Fault
Prb2	Probe 2 Fault
Prb3	Probe 3 Fault
Prb4	Probe 4 Fault
Prb5	Probe 5 Fault
Prb6	Probe 6 Fault
Pd or REC	Control State in Recovery
dEF	Control State in Defrost
AL	Control State in Alarm
FAnS ONLY	Controller in Fans Only
Ligt ONLY	Controller in Lights Only
CASE OFF	Controller in Case Off
Ot	Over Temperature Alarm
Ut	Under Temperature Alarm
door	Door Open Alarm
Man TrAP	Person Trapped Alarm
PLnt	Plant Fault
LgOt	Log Probe Over Temperature
LgUt	Log Probe Under Temperature

Network Alarms

The table below shows the text and associated type number that is sent to the system "front end". The type number is normally used to provide different alarm actions.

Alarm text	Type # (index)
Missed defrost	15
Plant Fault 1	3
Case over temperature	4
Case under temperature	5
Probe 1 Faulty	6
Probe 2 Faulty	6
Probe 3 Faulty	6



Please ensure all power is switched off before installing or maintaining this product.

Probe 4 Faulty	6
Probe 5 Faulty	6
Probe 6 Faulty	6
Door Left Open	2
Product over temperature	8
Product under temperature	9
Remote evap temperature	6
Person Trapped	1
Case Clean	29
Load Shedding	7

Modifying controller states

During normal operation you can change the following states from the function menu

Fans Only "FAnS"

Selecting the Fans Only option will put the controller into the Fans Only state if the current state is not Fans Only. If the current state is Fans Only then the controller will change to the Normal state. Selecting this option will exit the setup menu automatically. The display will show "FAnS OnLy"

If a remote display with key switch is being used, this function can be invoked by turning the key switch to the fans only position (90 degrees clockwise) with parameter P85 set to "fans"

Case Off "CASE"

Selecting the Case Off option will put the controller into the Case Off state if the current state is not Case Off. If the current state is Case Off then the controller will change to the Normal state. Selecting this option will exit the setup menu automatically. The display will show "CASE OFF"

If a remote display with key switch is being used, this function can be invoked by turning the key switch to the case-off position. (Clockwise 90 degrees) with parameter P85 set to "case"

Lights Only "Ligt"

Selecting the Lights Only option will put the controller into the Lights Only state if the current state is not Lights Only. If the current state is Lights Only then the controller will change to the Normal state. Selecting this option will exit the setup menu automatically. The display will show "Ligt OnLy"

Note. When lights are being used in "Remote" mode with a timing channel: -

If the controller goes offline, the lights are turned ON after a delay of 5 minutes. The lights will stay on until the controller comes back on-line where they will revert to the state of the timing channel being used.

Probe Offset

This feature allows each probe value to be modified by an "offset". Offset values are from -10°C (-18°F) to +10°C (+18°F) and on a channel basis. Example C1 = Probe 1.



Please ensure all power is switched off before installing or maintaining this product.

Remote Commands:


The following commands can be used by a Data Builder program:

Command	Value to send	Description	Conditions;
Setpoint Command	$\pm 18^{\circ}$	Is added to or subtracted from the setpoint	
Haccp Command	0	HACCP LED OFF	
	1	HACCP LED On	
	2	HACCP LED Flashes	
Defrost Command	1	Initiates a defrost cycle	Defrost mode: remote
Defrost Command	3	Terminates the defrost	Defrost mode: remote Defrost hold: On Defrost min state complete
Case Off Command	0	Case runs normally	
	5	Case Off; all alarms are inhibited	
EEV Command	2	Shuts the valve off	
	1	Restores the valve to normal operation	

Use an "Analogue Out" block configured to the controller name and in the value field type in the command you require. Use a "Setting block" as the input to the "Analogue Out" block to send the Value.

See Example to the right

which sets the HACCP LED on:

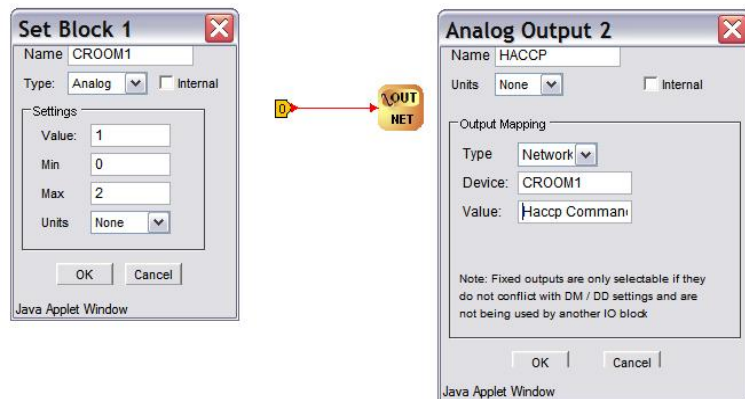

Please ensure all power is switched off before installing or maintaining this product.

Specification

Power requirements

Supply Voltage Range:	100 - 240 Vac $\pm 10\%$
Supply Frequency:	50 - 60 Hz
Maximum supply current:	40 Amps
Operating temperature range:	+5°C to +50°C
Operating Humidity:	80% maximum
Storage temperature range:	-20°C to +65°C
Environmental:	Indoor use at altitudes up to 2000m, Pollution Degree 1, Voltage fluctuations not to exceed $\pm 10\%$ of nominal voltage
Size:	240mm (W) x 300mm (H) x 140mm (D)
Weight:	2.2 Kilograms
Safety:	EN61010 This device MUST be earthed
EMC:	EN61326; 1997 +Amdt. A1; 1998
Ventilation:	There is no requirement for forced cooling ventilation
The host equipment must provide a suitable external over-current protection device such as:	
Fuse:	40A 240 Vac Antisurge (T) HRC conforming to IEC 60127
Or MCB:	40A, 240 VAC Type C conforming to BS EN 60898
IP Rating	IP 40

The host equipment must provide adequate protection against contact to hazardous live parts.

Maximum Output Loads

Note in later Coldroom panel hardware revisions, Revision 2, the Compressor/LLV, Fans and Defrost ratings have been revised. Please view the appropriate listing, shown below, depending on the hardware revision in use. A visual inspection of the Coldroom panel must take place to determine the hardware revision. A label is affixed alongside the relay outputs highlighting the current rating in Amps.

Note in Revision 2 the Compressor/LLV and Defrost MCB or Fuse can be interchanged to allow the higher rated MCB or Fuse to be used on the Compressor/LLV relay output and the lower rated MCB or fuse to be used on the Defrost relay output. Please see [Appendix 1](#)

Revision 1 (Earlier Hardware)

Compressor/LLV: Switched Output Voltage:	15A (non inductive) Same as supply voltage	8A $\text{Cos}\Phi=0.4$: Motor Load ($\text{Cos}\Phi=0.6$) $\frac{1}{2}$ HP
EEV: Switched Output Voltage:	5A (non inductive) Same as supply voltage	2A $\text{Cos}\Phi=0.4$
Defrost: Switched Output Voltage:	15A (non inductive) Same as supply voltage	8A $\text{Cos}\Phi=0.4$
Fans: Switched Output Voltage:	10A (non inductive) Same as supply voltage	8A $\text{Cos}\Phi=0.4$
Lights: Switched Output Voltage:	6A (non inductive) Same as supply voltage	6A $\text{Cos}\Phi=0.4$
Out 1: Permanent Output Voltage:	5A Same as supply voltage	
Out 2: Permanent Output Voltage:	1A Same as supply voltage	



Please ensure all power is switched off before installing or maintaining this product.

Revision 2

Compressor/LLV:	10A (non inductive) 8A Cos Φ =0.4: Motor Load (Cos Φ =0.6) ½ HP	User configuration dependant see Appendix 1
Switched Output Voltage:	Same as supply voltage	
EEV:	5A (non inductive)	2A Cos Φ =0.4
Switched Output Voltage:	Same as supply voltage	
Defrost:	20A (non inductive) 8A Cos Φ =0.4	User configuration dependant see Appendix 1
	15A (non inductive)	On UL Version Only
Switched Output Voltage:	Same as supply voltage	
Fans:	8A (non inductive)	8A Cos Φ =0.4
Switched Output Voltage:	Same as supply voltage	
Lights:	6A (non inductive)	6A Cos Φ =0.4
Switched Output Voltage:	Same as supply voltage	
Out 1:	5A	
Permanent Output Voltage:	Same as supply voltage	
Out 2:	1A	
Permanent Output Voltage:	Same as supply voltage	

Inputs

Probes:	
Input type	Selectable
Entrapment and Door alarms	0V return
Comms:	RS232 with flow control
Ethernet (IP)	10BaseT
RS485	Genus compatible
Transducer Input:	4-20mA, 0-10v or user configurable.




Please ensure all power is switched off before installing or maintaining this product.

Installation

Fixing

The Coldroom Panel has 4 fixing holes: (dimensions are in mm and inches)

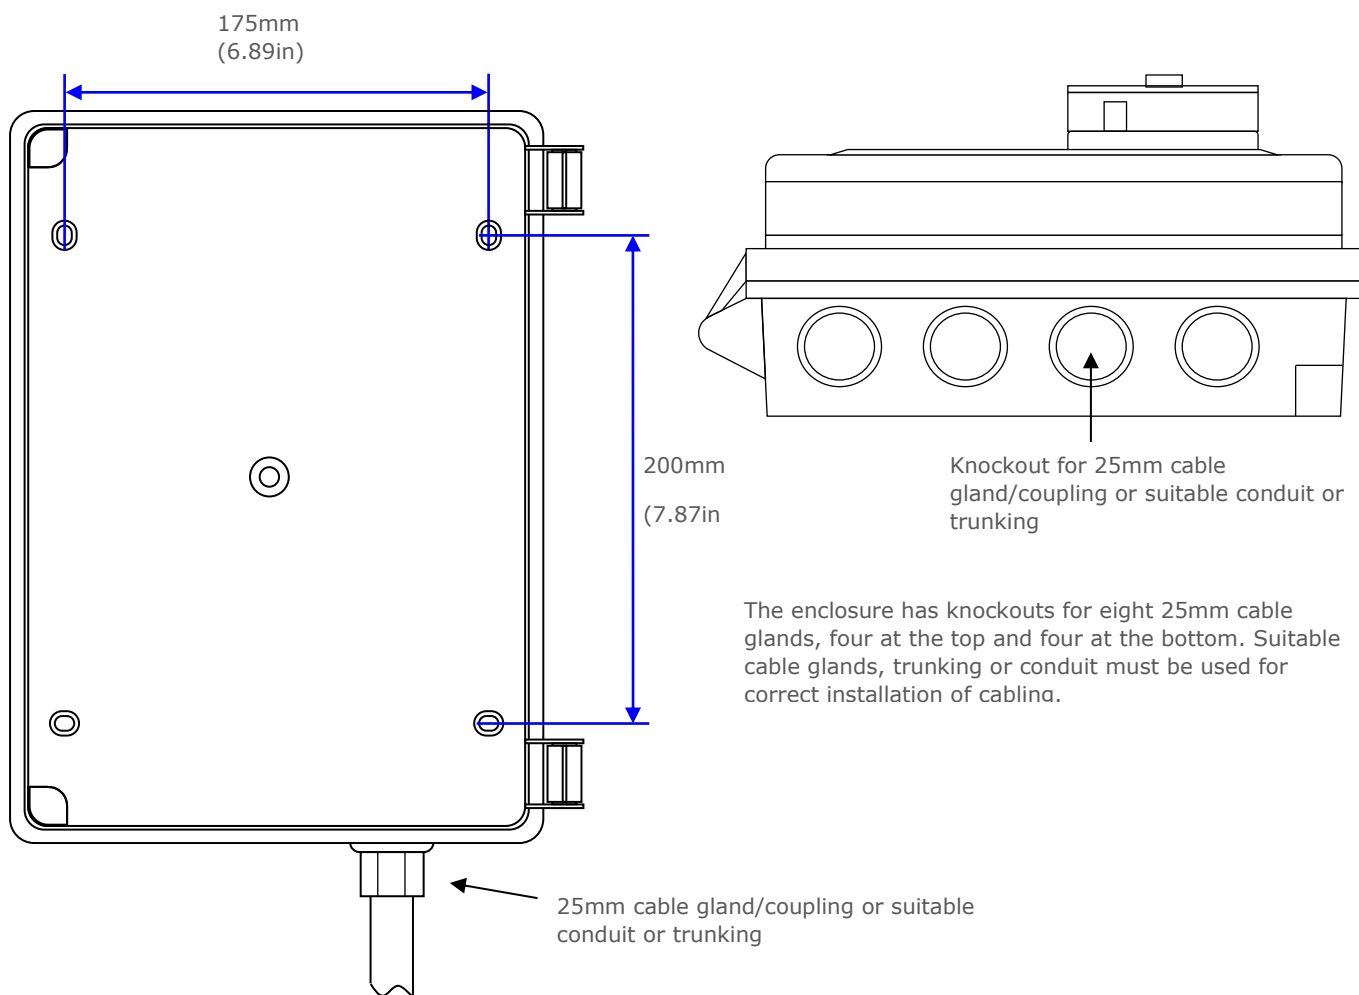

Please ensure all power is switched off before installing or maintaining this product.


Display Remote Mounting

The display section of the Coldroom Panel can be removed for remote fixing. Unscrew the two front panel screws; take off the display front and then remove the 4 screws housing the display back onto the main enclosure. The display has a 5 meter cable which requires to be uncoiled from its internal location. Ensure that all power is disconnected before this operation.

Mount the display back onto the surface using the centres below and then assemble the display front, securing with the 2 front panel screws.

Display dimensions and fixing

Dimensions are in mm

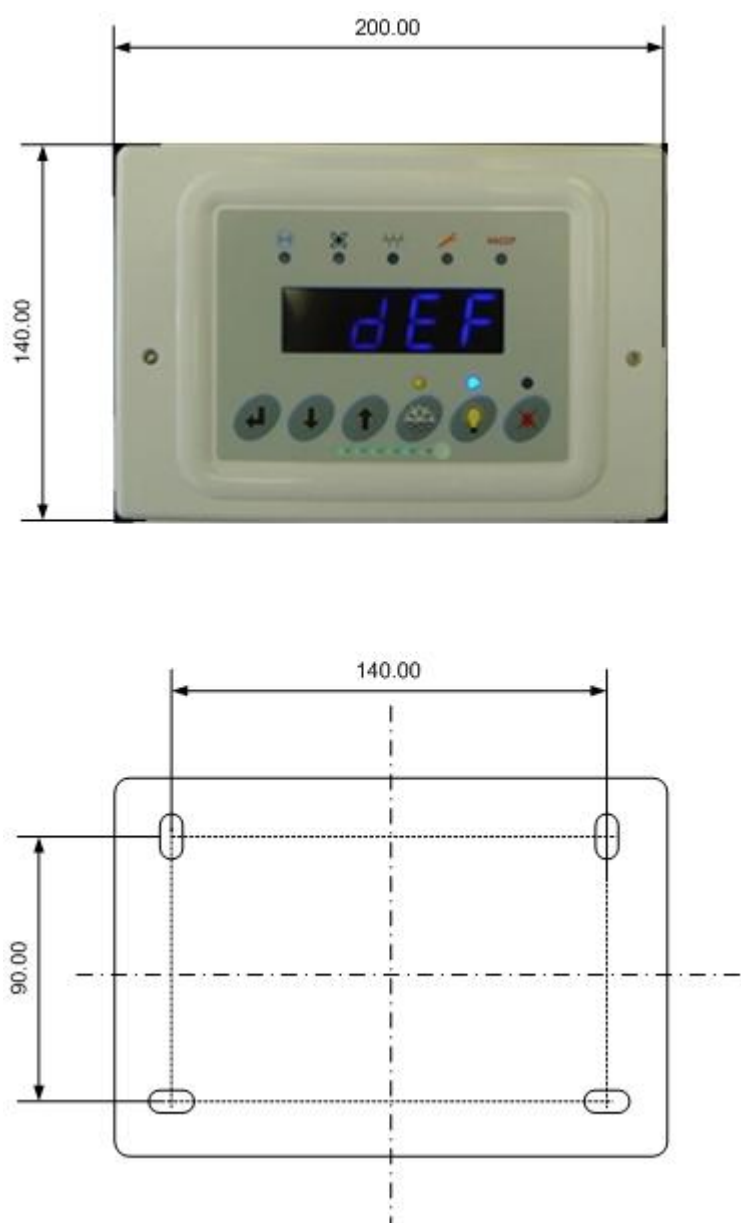

Please ensure all power is switched off before installing or maintaining this product.

Ordering Information

To order the correct hardware options the following part number descriptions are followed;

Coldroom Panel - **PR0150 V W X Y Z**

Letter	Options
V	E = Pulse Electronic Expansion Valve (SSR fitted)
	M = Mechanical Expansion Valve
W	N = No Isolator Switch
	S = Isolator Switch Fitted
X	B = Circuit Breakers Fitted
Y	IP = IP Network Card Fitted
	485 = RS485 Genus Network Card Fitted
	Blank = RS232 Port
Z	PI = Pressure Input Card Fitted (EEV Variants only)
	Blank = No Transducer Card Fitted

Example: Part number **PR0150 ESBIP PI** is for Pulse **E**lectronic expansion valve, isolator **S**witch fitted, circuit **B**reakers fitted, **IP** network card fitted and **P**ressure **I**nput card fitted.

Disclaimer:


The specifications of the product detailed in this document may change without notice. RDM Ltd shall not be liable for errors or omissions, for incidental or consequential damages, directly or indirectly, in connection with the furnishing, performance or misuse of this product or document.



Please ensure all power is switched off before installing or maintaining this product.

- 7) Remove the fixing plate. Swap the MCB in position "F5 Defrost" to "F1 Compressor/LLSV" and the MCB from "F1 Compressor/LLSV" to "F5 Defrost" taking note of the orientation of the MCB.

The image below shows the view of the Coldroom with the fixing plate removed.

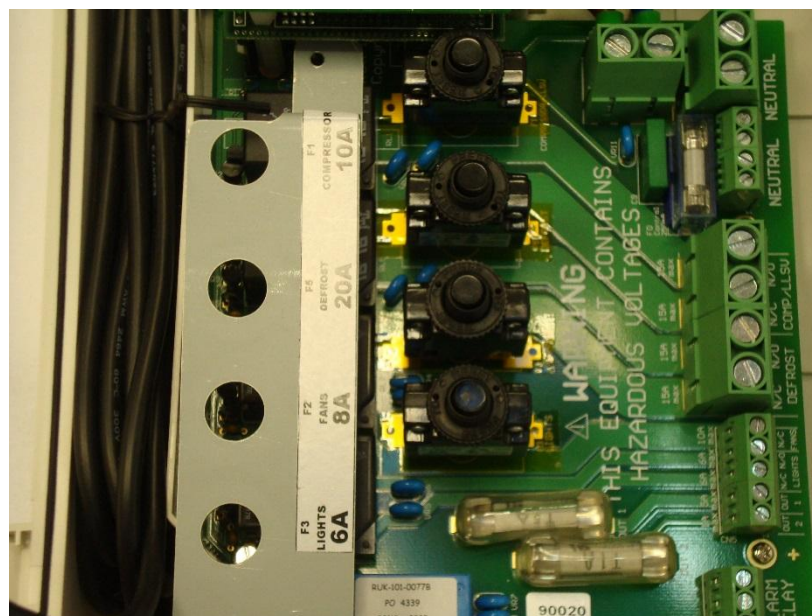

- 8) Ensure the MCB's are securely fitted and the desired rated MCB's are in the appropriate positions before re-inserting the fixing plate.
- 9) Now secure the fixing plate using the previously removed screws.
- 10) Reattach the plastic washers to the MCB's.
- 11) A secondary label is supplied with the Coldroom panel and **must** be affixed to indicate that the MCB positions and therefore ratings have changed for the Compressor/LLV and Defrost MCB.
- 12) Close the Coldroom panel door and secure the front panel via the two screw fixings.

Warning: Only the Compressor/LLV and Defrost MCB positions are interchangeable. No other MCB positions can be altered.

Instructions – Fuse Variants

- 1) Before working on this equipment, ensure that the device is fully isolated from any supply voltage, including connections to all relays and other I/O connectors.
- 2) Open the Coldroom front panel by unscrewing the screw fixings at the top right and bottom right of the panel door. If an Isolator switch is fitted to the Coldroom panel then this must be in the off position before the door will open.
- 3) Locate the Fused outputs.



Please ensure all power is switched off before installing or maintaining this product.

- 4) Look at the PCB screen print to identify each output and the associated Fuse. Note the ratings of the Fuse are marked on each Fuse and they should be checked to ensure the current Fuse rating is correct for the position in which the Fuse is fitted.
- 5) To swap the higher rated Defrost Fuse over with the Compressor/LLV Fuse firstly remove the rubber cover on each Defrost and Compressor/LLV Fuse.
- 6) Now remove and swap the Fuse in position "F5 Defrost" to "F1 Compressor/LLSV" and the Fuse from "F1 Compressor/LLSV" to "F5 Defrost".
- 7) Ensure the Fuses are securely fitted and the desired rated Fuse is in the appropriate position.
- 8) Now reattached the rubber cover over each Fuse ensuring the fuse and holder is fully covered.
- 9) Close the Coldroom panel door and secure the front panel via the two screw fixings.

Warning: Only the Compressor/LLV and Defrost Fuse positions are interchangeable. No other Fuse positions can be altered.



Please ensure all power is switched off before installing or maintaining this product.

Revision History

Revision	Date	Changes	Comments
1.0	03/08/2007	1 st Issue	
1.1	10/08/2007	Typo's corrected	
6.2	07/07/2008	Revision number in revision history now reflects that of the controller software version, option to disable buzzer operation, additional text added for onboard digital inputs, man trap alarm forces lights on, table with part numbers added, table added highlighting available digital inputs, ability to initiate a defrost from an external defrost input added, response on/off changed to EEV prop gain, integ gain and integ time, parameter for remote suction select added, MOP support added (see P-30), IO tables updated for E & M to include new features, additional remote commands added.	
6.3	31/10/2008	Internal Cable for alarm inputs added	
6.3a	21/05/2009	Typo's corrected	
6.3b	22/06/2009	Updated digital input descriptions.	
6.3c	26/03/2010	Revised relay ratings guide introduced.	
6.3d	14/04/2010	EEV Control information updated.	
6.3e	15/12/2011	Descriptions changed	
6.3f	15/06/2012	New look, RS485 connections added	
6.3g	02/07/2012	IP Rating added New Processor	
6.3h	21/11/2012	Cable gland instruction added.	
7.0	17/05/2013	Update of new features, Fan control, Load Shedding	
7.1	19/09/2013	Added Feature – Pin restrictions on accessing menus on controller display	
7.1a	10/03/2014	P-30 Description corrected, changed from evap. Select to broadcast ID	
7.1b	02/04/2014	P-19 removed, lits spelling corrected to ligt.	
7.1c	27/08/2014	REC (recovery) added to possible display messages, (Pd on non Arm processor.)	
7.1d	26/11/2015	Error on page 25 corrected, fans relay changed to defrost relay.	
7.1e	29/01/2016	Network alarm table updated.	
7.1f	20/04/2016	Switched resistor description updated.	
7.2	03/06/2016	Parameter added to LLV version to allow probe 2 to be selected as defrost probe	
7.2a	26/10/2016	When a person trapped alarm occurs it now pulses for 2 seconds on, 1 second off.	
7.2b	16/05/2017	New documentation format	
7.2c	11/08/2017	Door Switch operation updated.	
7.3	23/06/2017	Load Shedding allowed in OT/UT alarm	
7.4	14/09/2018	Glide Parameter (P-34) increased to 15. Person Trapped alarm will re-alarm one minute after being muted if alarm is still active.	
7.5	08/11/2019	Transducer input board option added, custom refrigerant added, custom transducer input option added, EEV scaling parameter added.	
7.5a	22/11/2019	Valve description updated.	
7.6	10/03/2020	485 support enhanced	
7.7	23/09/2020	Improvements to broadcast pressure.	
7.7a	14/04/2023	Note added regarding polarity of door and entrapment switch inputs.	
7.7b	28/07/2023	Defrost relay current capacity updated for UL versions.	
7.7c	14/01/2025	Remote Setpoint offset range updated to +- 18.	
7.7d	06/02/2025	Fused variant removed from Ordering Information section	



Please ensure all power is switched off before installing or maintaining this product.

Group Offices

RDM Group Head Office

80 Johnstone Avenue
Hillington Industrial Estate
Glasgow
G52 4NZ
United Kingdom

+44 (0)141 810 2828
support@resourcedm.com

RDM Inc

100 North Sixth Street
Suite 630B
Minneapolis, MN
55403
United States

+1 612 354 3923
usasupport@resourcedm.com

RDM Asia

Sky Park at One City
Jalan USJ 25/1
47650 Subang Jaya
Selangor
Malaysia

+60 3 5115 0061
info@rdmasia.com.my



Visit www.resourcedm.com/support for more information on RDM solutions, additional product documentation and software downloads.

While every effort is made to ensure the information given within this document is accurate, Resource Data Management Ltd shall not be liable for errors or omissions, for incidental or consequential damages, directly or indirectly, in connection with the furnishing, performance or misuse of this product or document. All specifications are subject to change without notice.

See www.resourcedm.com for terms and conditions of sales.

Copyright © Resource Data Management